


CONNECTOR INFORMATION FOR DIAGRAM: P94-1341


REF. DES.	NUMBER OF CAVITIES	PART NUMBER	DESCRIPTION	LOCATION OF CONNECTOR
J04	1	K333-237	BLACK, MOLDED, 1-WAY	LOCATED AT RH DOOR JAMB
J06	6	K333-586-206	BLACK, MOLDED, 1-WAY	LOCATED AT LH DOOR JAMB
J07	1	K333-238	1-WAY, BLACK, MOLDED, BULLET	LOCATED BEHIND SPEEDO/TACH PANEL
J08	2	K333-549-202	BLACK, PACKARD, M/P, 280, UNSEALED	LOCATED BEHIND SPEEDO/TACH PANEL
J09	22	K333-396-1	NATURAL, PACKARD, WEATHER, PACK	LOCATED IN FIREWALL BESIDE JUNCTION PLATE
J10	9	K333-460-1	METAL, DEUTSCH, HD30, SERIES	LOCATED IN LH RAIL AT BACK OF CAB
J11	1	K333-46-9	RING, TERMINAL, (#10)	LOCATED IN FRAME MOUNTED JUNCTION BOX
J12	6	K333-400	BLACK, PACKARD, WEATHER, PACK	LOCATED IN LH RAIL AT BACK OF CAB
J13	6	K333-400	BLACK, PACKARD, WEATHER, PACK	LOCATED IN LH RAIL NEAR END OF FRAME
J15	9	P20-1133-09-5-0	BLACK, DEUTSCH, HD30, 9-WAY, PLUG	LOCATED IN FIREWALL ON EXTREME LH SIDE
J16	6	K333-586-206	6-WAY, BLACK, PACKARD, M/P, 280	LOCATED BEHIND AREA 8 PANEL
J17	1	P20-1112	BLACK, AMP, 1/4", RECEPTACLE	LOCATED ON BACK OF PARK LAMP SWITCH
J18	1	P20-1112	BLACK, AMP, 1/4", RECEPTACLE	LOCATED ON BACK OF HEAD LAMP SWITCH
J19	1	P20-1112	BLACK, AMP, 1/4", RECEPTACLE	LOCATED ON BACK OF HEAD LAMP SWITCH
J20	6	K333-586-206	6-WAY, BLACK, PACKARD, M/P, 280	LOCATED BEHIND AREA 8 PANEL
J21	1	P20-1112	BLACK, AMP, 1/4", RECEPTACLE	LOCATED ON BACK OF FOG LAMP SWITCH
J22	1	P20-1112	BLACK, AMP, 1/4", RECEPTACLE	LOCATED ON BACK OF FOG LAMP SWITCH
J23	1	P20-1112	BLACK, AMP, 1/4", RECEPTACLE	LOCATED ON BACK OF FOG LAMP SWITCH
J24	1	P20-1112	BLACK, AMP, 1/4", RECEPTACLE	LOCATED ON BACK OF FOG LAMP SWITCH
J25	1	P20-1112	BLACK, AMP, 1/4", RECEPTACLE	LOCATED ON BACK OF PARK LAMP SWITCH
J26	1	P20-1112	BLACK, AMP, 1/4", RECEPTACLE	LOCATED ON BACK OF HEAD LAMP SWITCH
J27	1	P20-1112	BLACK, AMP, 1/4", RECEPTACLE	LOCATED ON BACK OF HEAD LAMP SWITCH
J28	3	K333-397	BLACK, PACKARD, WP	LOCATED AT LH SIDE TURN LAMP
J29	3	K333-397	BLACK, PACKARD, WP	LOCATED AT RH SIDE TURN LAMP
JP01	8	K333-8	BLUE, MOLDED, 8-WAY	LOCATED IN PD BOX DASH SIDE
JP02	8	K333-10	BLUE, MOLDED, 8-WAY	LOCATED AT PD BOX DASH SIDE
JP03	8	K333-483	BLACK, MOLDED, 8-WAY	LOCATED AT PD BOX ENGINE SIDE
JP04	16	K333-479	BLACK, MOLDED, 16-WAY	LOCATED IN PD BOX ENGINE SIDE
JP05	16	K333-482	BLACK, MOLDED, 16-WAY	LOCATED AT PD BOX ENGINE SIDE
JP06	16	K333-481	BLACK, MOLDED, 16-WAY	LOCATED IN PD BOX ENGINE SIDE
JP07	8	K333-8	WHITE, MOLDED, 8-WAY	LOCATED AT PD BOX DASH SIDE
JP08	8	K333-10	WHITE, MOLDED, 8-WAY	LOCATED AT PD BOX DASH SIDE
JP09	4	K333-117	WHITAKER, MOLDED	LOCATED NEAR RH TAIL LAMP ASSY
JP10	4	K333-117	WHITAKER, MOLDED	LOCATED NEAR LH TAIL LAMP ASSY
JP11	8	K333-483	BLACK, MOLDED, 8-WAY	LOCATED AT PD BOX ENGINE SIDE
JP12	8	K333-483	BLACK, MOLDED, 8-WAY	LOCATED AT PD BOX ENGINE SIDE
JP13	3	94960	TRUCKLITE, 3-WAY	LOCATED AT LH FRONT TURN SIGNAL
JP14	3	94960	TRUCKLITE, 3-WAY	LOCATED AT RH FRONT TURN SIGNAL
P01	6	K333-586-106	BLACK, PACKARD, M/P, 150, UNSEALED	LOCATED BEHIND SPEEDO/TACH PANEL
P02	22	K333-395-1	NATURAL, PACKARD, WEATHER, PACK	LOCATED ON FIREWALL BESIDE JUNCTION PLATE
P03	9	K333-460-1	METAL, DEUTSCH, HD30, SERIES	LOCATED IN LH RAIL AT BACK OF CAB
P04	1	K333-403	BLACK, PACKARD, WEATHER, PACK	LOCATED AT LH FRONT TURN SIGNAL
P05	2	K333-387	BLACK, PACKARD, WEATHER, PACK	LOCATED AT LH FRONT TURN SIGNAL
P06	1	K333-403	BLACK, PACKARD, WEATHER, PACK	LOCATED AT RH FRONT TURN SIGNAL
P07	2	K333-387	BLACK, PACKARD, WEATHER, PACK	LOCATED AT RH FRONT TURN SIGNAL
P08	6	K333-399	BLACK, PACKARD, WEATHER, PACK	LOCATED IN LH RAIL AT BACK OF CAB
P09	9	P20-1134-09-1-0	DEUTSCH, HDP, SERIES	LOCATED ON FIREWALL ON EXTREME LH SIDE
P10	6	K333-586-106	BLACK, PACKARD, M/P, 150	LOCATED BEHIND AREA 8 PANEL
P11	6	K333-399	BLACK, PACKARD, WEATHER, PACK	LOCATED IN LH RAIL NEAR END OF FRAME
P12	6	K333-586-106	BLACK, PACKARD, M/P, 150	LOCATED BEHIND AREA 8 PANEL
P13	3	K333-507	GRAY, DEUTSCH, DT, SEALED	LOCATED AT LH SIDE TURN LAMP ASSY
P14	3	K333-507	GRAY, DEUTSCH, DT, SEALED	LOCATED AT RH SIDE TURN LAMP ASSY
P15	3	94970	3-WAY, BLACK, TRUCK-LITE, CONNECTOR	LOCATED NEAR RH TAIL LAMP ASSY
P16	3	94992	3-WAY, BLACK, TRUCK-LITE, CONNECTOR	LOCATED NEAR RH TAIL LAMP ASSY
P17	3	94970	3-WAY, BLACK, TRUCK-LITE, CONNECTOR	LOCATED NEAR LH TAIL LAMP ASSY
P18	3	94992	3-WAY, BLACK, TRUCK-LITE, CONNECTOR	LOCATED NEAR LH TAIL LAMP ASSY

CIRCUIT POSITION CHART:

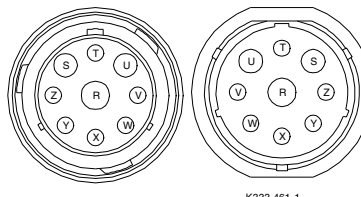

TERM INFORMATION FOR: J09, J02	
CIRCUIT	TERM
L1PL	V


CIRCUIT POSITION CHART:

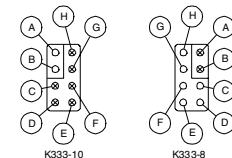

TERM INFORMATION FOR: JP01, JP02	
CIRCUIT	TERM
L1PL	C

TERM INFORMATION FOR: JP07, JP08	
CIRCUIT	TERM
R1PL	F

 
CIRCUIT POSITION CHART:



TERM INFORMATION FOR: JP09	
CIRCUIT	TERM
GND	A
L1PL	D
L36RT	C
L79BL	B

TERM INFORMATION FOR: JP10	
CIRCUIT	TERM
GND	A
L1PL	D
L35LT	C
L79BL	B

CIRCUIT POSITION CHART:

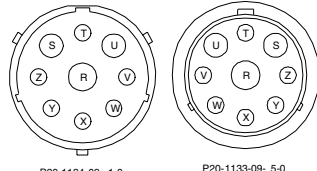

TERM INFORMATION FOR: J15, P09	
CIRCUIT	TERM
L1PL	V


12) SUPERSEDES R115-4510.

PROD SERV

GENERAL NOTES:


- 1) USE ON BI, BII, BIII CABS, NOT T300 OR T8CC/WC.
- 2) HOW TO USE THIS DIAGRAM:
EACH CONNECTOR HAS A DISTINCT ALPHANUMERIC "REFERENCE DESIGNATOR" OR "REF DES" ASSOCIATED WITH IT. USE REF DES TO FIND CONNECTOR INFORMATION IN THE CONNECTOR INFORMATION TABLE.

CIRCUIT POSITION CHART:

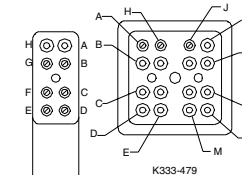


TERM INFORMATION FOR: JP03, JP04	
CIRCUIT	TERM
GND	H
L1PL	D

CIRCUIT POSITION CHART:

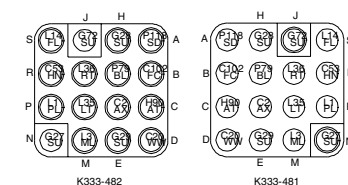


TERM INFORMATION FOR: JP05, JP06	
CIRCUIT	TERM
L1PL	A
GND	F

CIRCUIT POSITION CHART:

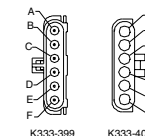

TERM INFORMATION FOR: J12, J13, P08, P11	
CIRCUIT	TERM
L1PL	A
GND	F

CIRCUIT POSITION CHART:

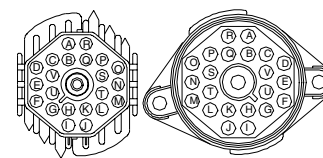


TERM INFORMATION FOR: J09, P02	
CIRCUIT	TERM
L1PL	E

FOR SERVICE PARTS OR
INVENTORY BALANCE ONLY
SUPERSEDED BY P94-1384


PROD SERV

 A




USAGE NOTE:
USE ON BI, BII, BIII CABS, NOT T300, T8CC OR T8WC.

DETAIL "C"
USE W/ T600 W/ FRONT TURN
SIGNAL W/O PARK LAMPS

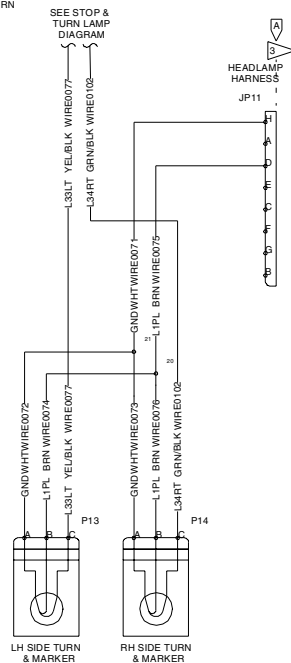

DETAIL "D"
USE W/ T600 W/ FRONT TURN
SIGNAL W/ PARK LAMPS

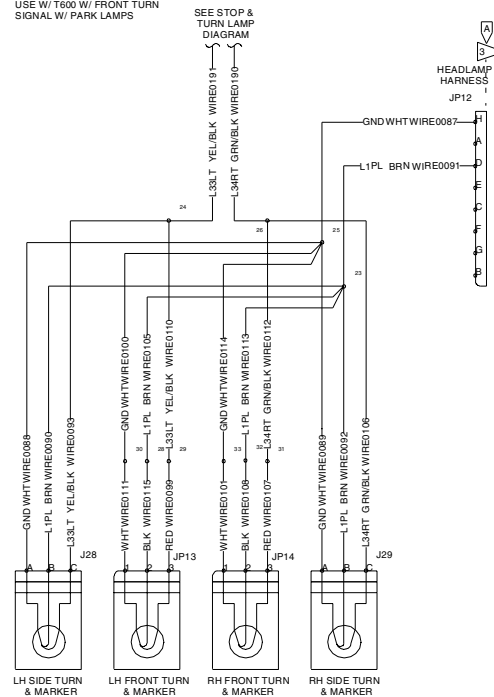

DETAIL "E"
USE W/ TRUCK-LITE
TAIL LAMP ASSEMBLY.

