 


CONNECTOR INFORMATION FOR DIAGRAM: P94-1329

REF. DES.	NUMBER OF CAVITIES	DESCRIPTION	LOCATION OF CONNECTORS
J03	6	BLACK PACKARD METRI-PACK	LOCATED BEHIND AREA 5 PANEL
J04	1	RING TERMINAL	LOCATED ON STOP LAMP SWITCH
J05	1	RING TERMINAL	LOCATED ON STOP LAMP SWITCH
J06	4	BLACK PACKARD METRI-PACK 280 UNSEALED	LOCATED BEHIND AREA 2 PANEL
J07	1	AMP FEMALE 1/4 SLIDE LOCKING	LOCATED ON TURN SIGNAL FLASHER
J08	1	AMP FEMALE 1/4 SLIDE LOCKING	LOCATED ON TURN SIGNAL FLASHER
J09	6	BLACK PACKARD 56	LOCATED BEHIND AREA 5 NEAR STEERING COLUMN
J10	6	BLACK PACKARD WEATHER PACK	LOCATED ON LH RAIL AT EOF
J11	6	BLACK PACKARD WEATHER PACK	LOCATED ON LH RAIL AT BOC
J12	2	NATURAL MOLEX MINI-FIT-JR	LOCATED ON 6-WAY WARNING LAMP MODULE
J13	2	NATURAL MOLEX MINI-FIT-JR	LOCATED ON 6-WAY WARNING LAMP MODULE
J14	6	BLACK PACKARD METRI-PACK	LOCATED BEHIND SPEEDO/TACH PANEL
J15	1	RING TERMINAL	LOCATED ON FIREWALL GND STUD
J16	3	BLACK PACKARD METRI-PACK 630 SEALED	LOCATED BOTTOM LH SIDE OF DASH
J17	1	BLACK DEUTSCH DTHD	LOCATED BOTTOM LH SIDE OF DASH
J18	1	RING TERMINAL	LOCATED BEHIND KICK PANEL
J19	1	RING TERMINAL	LOCATED BEHIND KICK PANEL
J20	5	BLACK PACKARD METRI-PACK	LOCATED BEHIND KICK PANEL
J21	8	BLACK PACKARD METRI-PACK	LOCATED BOTTOM LH SIDE OF DASH
J22	1	RING TERMINAL	LOCATED BEHIND SPEEDO/TACH PANEL
J23	9	BLACK DEUTSCH HDP20	LOCATED ABOVE POWER DISTRIBUTION BOX
J24	1	BLACK DEUTSCH DTHD	LOCATED ON FIREWALL, ENGINE SIDE NEAR PD BOX
J25	2	LITTELFUSE SEALED MAXIFUSE HOLDER	LOCATED NEAR ALTERNATOR
J26	1	RING TERMINAL	LOCATED ON POSITIVE TERMINAL OF ALTERNATOR
J27	2	BLACK PACKARD WEATHER PACK	LOCATED AT LH FRONT TURN SIGNAL
J28	2	BLACK PACKARD WEATHER PACK	LOCATED AT RH FRONT TURN SIGNAL
J29	3	BLACK PACKARD WP	LOCATED AT LH SIDE TURN SIGNAL
J30	3	BLACK PACKARD WP	LOCATED AT RH SIDE TURN SIGNAL
J31	22	NATURAL PACKARD WEATHER PACK	LOCATED ON FIREWALL BESIDE JUNCTION PLATE
J32	22	NATURAL PACKARD WEATHER PACK	LOCATED ON FIREWALL BESIDE JUNCTION PLATE
J33	4	GRAY PACKARD METRI-PACK 280 SEALED	LOCATED NEAR 22-WAY FIREWALL CONNECTOR, ENGINE SIDE
J34	9	METAL DEUTSCH HD30 SERIES	LOCATED INSIDE JUNCTION BOX
J35	1	RING TERMINAL (#10)	LOCATED INSIDE JUNCTION BOX
J36	1	RING TERMINAL (#10)	LOCATED INSIDE JUNCTION BOX
J37	1	RING TERMINAL (#10)	LOCATED INSIDE JUNCTION BOX
JP01	8	GRAY MOLDED 8-WAY	LOCATED ON POWER DISTRIBUTION BOX
JP02	8	GRAY MOLDED 8-WAY	LOCATED ON POWER DISTRIBUTION BOX
JP03	8	GRAY MOLDED 8-WAY	LOCATED ON POWER DISTRIBUTION BOX, ENGINE SIDE
JP04	16	BLACK MOLDED 16-WAY	LOCATED ON POWER DISTRIBUTION BOX, ENGINE SIDE
JP05	16	BLACK MOLDED 16-WAY	LOCATED ON POWER DISTRIBUTION BOX, ENGINE SIDE
JP06	16	BLACK MOLDED 16-WAY	LOCATED ON POWER DISTRIBUTION BOX, ENGINE SIDE
JP07	8	ORANGE MOLDED 8-WAY	LOCATED ON POWER DISTRIBUTION BOX, DASH SIDE
JP08	8	ORANGE MOLDED 8-WAY	LOCATED ON POWER DISTRIBUTION BOX, DASH SIDE
JP09	4	WHITAKER MOLDED	LOCATED ON RH TAIL LAMP ASSEMBLY
JP10	4	WHITAKER MOLDED	LOCATED ON LH TAIL LAMP ASSEMBLY
JP11	3	TRUCKLITE 3-WAY	LOCATED AT LH FRONT TURN SIGNAL
JP12	3	TRUCKLITE 3-WAY	LOCATED AT RH FRONT TURN SIGNAL
JP13	8	BLACK MOLDED 8-WAY	LOCATED ON POWER DISTRIBUTION BOX, ENGINE SIDE
JP14	8	BLACK MOLDED 8-WAY	LOCATED ON POWER DISTRIBUTION BOX, ENGINE SIDE
P01	6	BLACK PACKARD METRI-PACK 280 UNSEALED	LOCATED BEHIND AREA 5 PANEL
P02	4	BLACK PACKARD METRI-PACK 280 UNSEALED	LOCATED BEHIND AREA 2 PANEL
P03	2	BLACK PACKARD WEATHER-PACK	LOCATED AT LH SIDE TURN SIGNAL
P04	1	BLACK PACKARD WEATHER-PACK	LOCATED AT LH SIDE TURN SIGNAL
P05	2	BLACK PACKARD WEATHER-PACK	LOCATED AT RH SIDE TURN SIGNAL
P06	1	BLACK PACKARD WEATHER-PACK	LOCATED AT RH SIDE TURN SIGNAL
P07	6	BLACK PACKARD WEATHER-PACK	LOCATED ON LH RAIL AT EOF
P08	6	BLACK PACKARD WEATHER-PACK	LOCATED ON LH RAIL AT BOC
P09	6	BLACK PACKARD MP 150 UNSEALED	LOCATED BEHIND SPEEDO/TACH PANEL
P10	3	BLACK PACKARD METRI-PACK	LOCATED BOTTOM LH SIDE OF DASH
P11	1	BLACK DEUTSCH DTHD	LOCATED BOTTOM LH SIDE OF DASH
P12	8	BLACK PACKARD METRI-PACK	LOCATED BOTTOM LH SIDE OF DASH
P13	9	DEUTSCH HDP SERIES	LOCATED ABOVE POWER DISTRIBUTION BOX
P14	1	BLACK DEUTSCH DTHD	LOCATED ON FIREWALL, ENGINE SIDE NEAR PD BOX
P16	3	GRAY DEUTSCH DT SEALED	LOCATED AT LH SIDE TURN SIGNAL
P17	3	GRAY DEUTSCH DT SEALED	LOCATED AT RH SIDE TURN SIGNAL
P19	22	NATURAL PACKARD WEATHER-PACK	LOCATED ON FIREWALL BESIDE JUNCTION PLATE
P20	9	METAL DEUTSCH HD30 SERIES	LOCATED INSIDE LH RAIL AT BOC
P21	4	GRAY PACKARD MP 280 SERIES	LOCATED NEAR 22-WAY FIREWALL CONNECTOR, ENGINE SIDE

 
FOR SERVICE PARTS OR
INVENTORY BALANCE ONLY
SUPERSEDED BY P94-1399

CIRCUIT POSITION CHART:




K333-549-108K K333-549-20

CIRCUIT POSITION CHART:




K333-116 K333-117

CIRCUIT POSITION CHART:

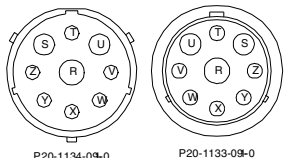


P20-1134-09-0 P20-1133-09-0

CIRCUIT POSITION CHART:

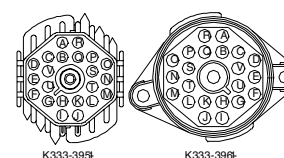


K333-393 K333-394


CIRCUIT POSITION CHART:

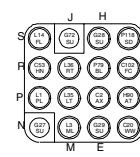


K333-482 K333-481

  CIRCUIT POSITION CHART:






DETAIL "B"
USE W/ T600 W/ FRONT TURN
SIGNAL W/O PARK LAMPS

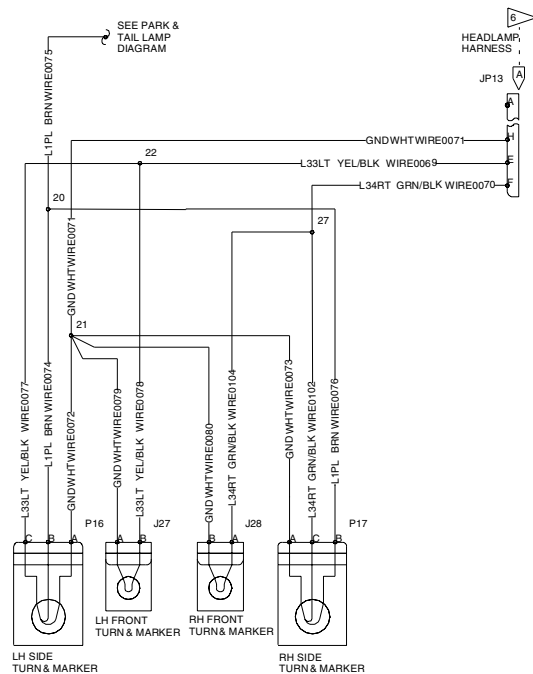

DETAIL "C"
USE W/ T600 W/ FRONT TURN
SIGNAL W/ PARK LAMPS

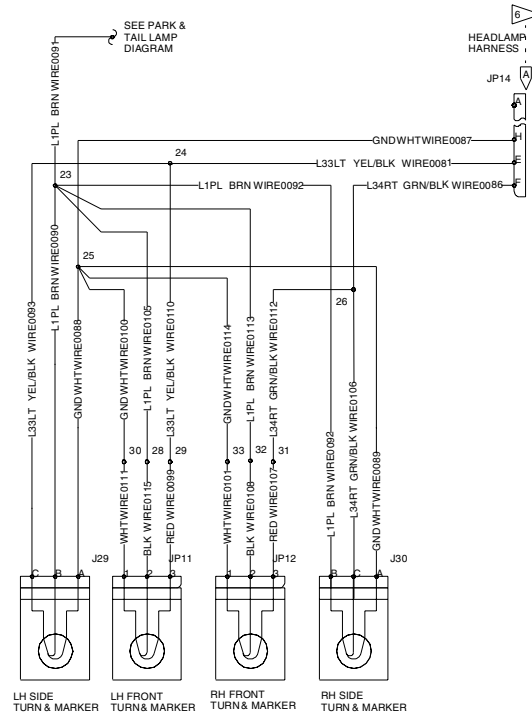

USAGE NOTE:

USE ON BI, BII, BIII CABS, NOT T300 OR T8CC/T8WC.

DETAIL "D"
USE WITH FRAME MTD JUNCTION BOX

