

Section 6.2.1.55

Acronyms

AAT Sensor	Ambient Air Temperature Sensor
ACC	Air Conditioner Clutch
AFTDOCM	Aftertreatment Diesel Oxidation Catalyst Missing
AFTDPF	Aftertreatment Diesel Particulate Filter
AFTDPFIP	Aftertreatment Diesel Particulate Filter Inlet Pressure
AFTDPFM	Aftertreatment Diesel Particulate Filter Missing
AFTDPFOBT	Aftertreatment Diesel Particulate Filter Outlet B Temperature
AFTDPFOP	Aftertreatment Diesel Particulate Filter Outlet Pressure
AFTDPFOT	Aftertreatment Diesel Particulate Filter Outlet Temperature
AFTGOCIT	Aftertreatment Gas Oxidation Catalyst Inlet Temperature
AFTGOCOBT	Aftertreatment Gas Oxidation Catalyst Outlet B Temperature
AFTGOCOT	Aftertreatment Gas Oxidation Catalyst Outlet Temperature
AFTSCRIT	Aftertreatment Selective Catalyst Reduction Inlet Temperature
AFTSCROT	Aftertreatment Selective Catalyst Reduction Outlet Temperature
AM	Air Mass Flow
ARH	Ambient Relative Humidity
BARO	Barometric Pressure
BV	Battery Voltage
CAC	Charge Air Cooler
CACODP	Charge Air Cooler Outlet Differential Pressure
CACOP	Charge Air Cooler Outlet Pressure
CACOT	Charge Air Cooler Outlet Temp
CCBA	Crankcase Breather Actuator
CKPOS	Crankshaft Position
CMPOS	Camshaft Position
DEFALA	Diesel Exhaust Fluid Air Lock Actuator
DEFAP	Diesel Exhaust Fluid Air Pressure
DEFAVA	Diesel Exhaust Fluid Air Valve Actuator
DEFDA	Diesel Exhaust Fluid Doser Actuator
DEFDHA	Diesel Exhaust Fluid Diffuser Heater Actuator
DEFLH	Diesel Exhaust Fluid Line Heater
DEFLHA1	Diesel Exhaust Fluid Line Heater Actuator 1
DEFLHA2	Diesel Exhaust Fluid Line Heater Actuator 2
DEFLHA3	Diesel Exhaust Fluid Line Heater Actuator 3
DEFLHA4	Diesel Exhaust Fluid Line Heater Actuator 4
DEFLHA5	Diesel Exhaust Fluid Line Heater Actuator 5
DEFP	Diesel Exhaust Fluid Pressure
DEFPA	Diesel Exhaust Fluid Pump Actuator
DEFQ	Diesel Exhaust Fluid Quality
DEFT	Diesel Exhaust Fluid Temperature

DEFTHA	Diesel Exhaust Fluid Tank Heater Actuator
DEFTHVA	Diesel Exhaust Fluid Tank Heater Valve Actuator
DEFTL	Diesel Exhaust Fluid Tank Temperature
DEFTT	Diesel Exhaust Fluid Tank Temperature
EBA	Exhaust Brake Actuator
EBA	Engine Brake Actuator
EC	Engine Coolant
ECBA	Engine Compression Brake Actuator
ECBA1	Engine Compression Brake Actuator 1
ECBA2	Engine Compression Brake Actuator 2
ECBOSS	Engine Crankcase Breather Oil Separator Speed
ECIT	Engine Coolant Inlet Temperature
ECOT	Engine Coolant Outlet Temperature
ECPA	Engine Coolant Pump Actuator
ECUPSV	Engine Control Unit Power Supply Voltage
ECUPSV1	Engine Control Unit Power Supply Voltage
ECUPSV2	Engine Control Unit Power Supply Voltage
EFT	Engine Fuel Temperature
EGRA	Exhaust Gas Recirculation Actuator
EGRC	Exhaust Gas Recirculation Cooler
EGRCA	Exhaust Gas Recirculation Cooler Actuator
EGRDP	Exhaust Gas Recirculation Differential Pressure
EGRM	Exhaust Gas Recirculation Mass Flow
EGRP	Exhaust Gas Recirculation Pressure
EGRPOS	Exhaust Gas Recirculation Position
EGRT	Exhaust Gas Recirculation Temperature
EOL	Engine Oil Level
EONOX	Engine-Out NOx (EONOX) Concentration
EOP	Engine Oil Pressure
EOT	Engine Oil Temperature
ERPM	Engine Revolutions Per Minute
ES	Exhaust Soot
ESA	Ether Start Actuator
F1A	Fan 1 Actuator
F2A	Fan 2 Actuator
FCA	Fan Clutch Actuator
FIAA	Fuel Injector Amplifier Actuator
FINA	Fuel Injector Needle Amplifier
FM	Fuel Mass
FMU	Fuel Metering Unit
FPCV	Fuel Pressure Control Valve
FRP	Fuel Rail Pressure

FSWL	Fuel Supply Water Level
FSP	Fuel Supply Pressure (FPS)
HCD	HC Doser
HCDIP	HC Doser Inlet Pressure
HCDOP	HC Doser Outlet Pressure
HCFCV	HC Fuel Cutoff Valve
IAHA	Intake Air Heater Actuator
IAP	Intake Air Pressure
IARH	Intake Air Relative Humidity
IAT	Intake Air Temperature
IATA	Intake Air Throttle Actuator
IATPOS	Intake Air Throttle Position
IMAT	Intake Manifold Air Temperature
IMP	Intake Manifold Pressure
MIL	Malfunction Indicator Lamp
NO2S	NOx O2 Sensor
O2S	Oxygen Sensor
SA	Starter Actuator
SSBV1	Sensor Supply Bank Voltage
SSBV2	Sensor Supply Bank Voltage
TBA	Turbocharger Brake Actuator
TCA	Turbocharger Actuator
TCCA	Turbocharger Compound Actuator
TCCBA	Turbocharger Compound Bypass Actuator
TCCVA	Turbocharger Compound Volute Actuator
TCCVS	Turbocharger Compound Volute Shutoff
TCIDP	Turbocharger Inlet Differential Pressure
TCODP	Turbocharger Outlet Differential Pressure
TCOP	Turbocharger Outlet Pressure
TCOT	Turbocharger Compressor Outlet Temperature
TCWA	Turbocharger Wastegate Actuator
TPNOX	Tailpipe NOX (TPNOX) Concentration
TS	Thermal Switch
TCSS	Turbocharger Shaft Speed
VCMA	Variable Camshaft Actuator
VNTPOS	Variable Nozzle Turbo Position

Generated on 01-13-2010
