


ACom™ Diagnostics Diagnostic Software for ABS User Guide

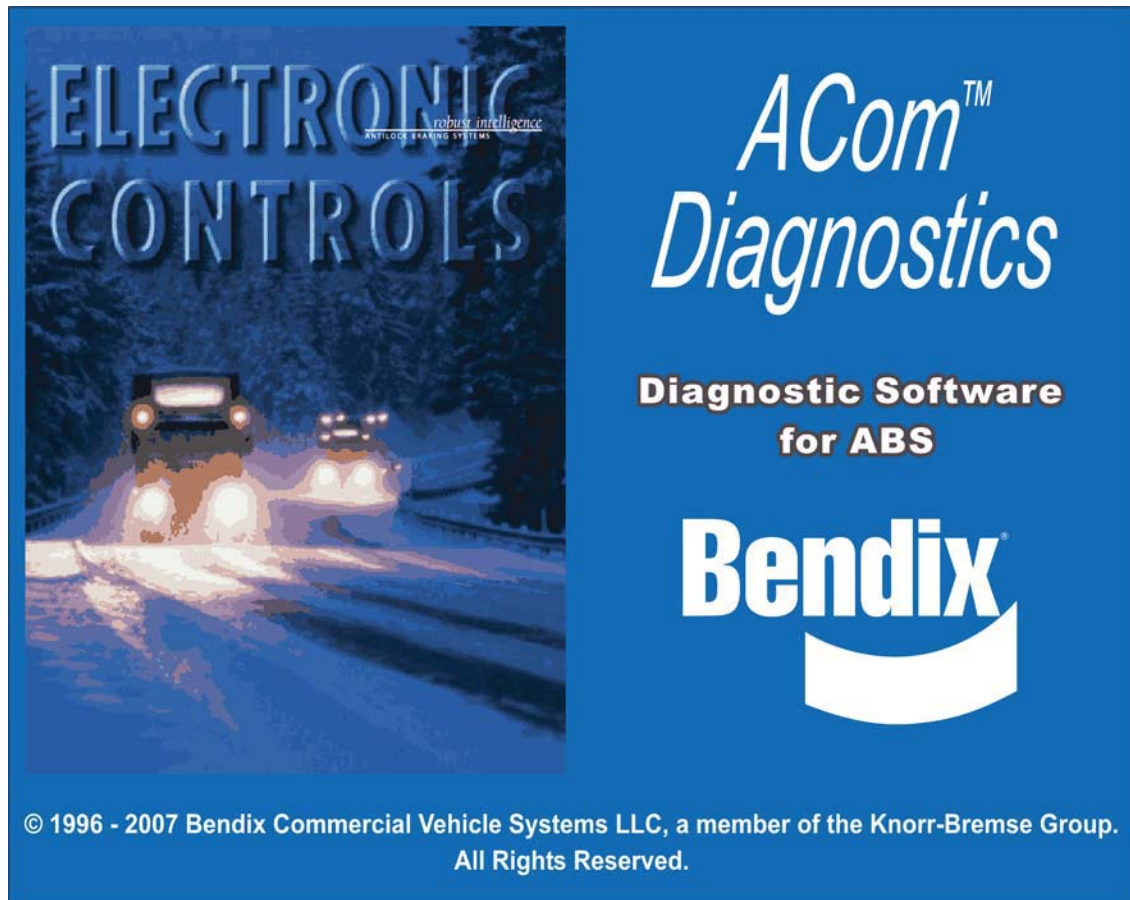

INDEX

General Information	3
RP1210B adapters	3
PC hardware requirements.	3
Technical Assistance	3
Installing ACom™ Diagnostics	5
Uninstall ACom™ Diagnostics	6
Help	6
Demo Mode	6
Hardware Adapter Selection	6
Functions of Software	6
Diagnostic Trouble Code Screen.	8
Configuration Screen.	9
Wheel Speed Screen.	12
Component Test	13
Installation Test.	16
Pressure Sensor	21
Stability Sensor	21
Scratch Pad	22
ADL Auxiliary Design Language	22
Tire Inflation and Monitoring System.	23
Known Issues with ACom Operation.	24

Windows 95, Windows 98, Windows NT, Windows 2000, Windows Vista and Windows XP are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

This guide, as well as the software described in it, is furnished under license and may only be used or copied in accordance with the terms of the license.

The information provided in this manual is for informational purposes only and is subject to change without notice and should not be construed as a commitment by Bendix Commercial Vehicle Systems LLC ("Bendix"). Bendix assumes no responsibility or liability for any errors or inaccuracies that may appear in this publication.

General Information

ACom™ diagnostics will provide the user with the capability to view and repair ABS component diagnostic trouble codes, monitor wheel speeds, display and edit configuration of ABS ECU, self-configure ABS ECU, and test ABS components.

This application will support the Bendix® EC-60™, Bendix® EC-17, Bendix® EC-30™, Gen 4, Gen 5 (U12 and U16), ABS 2X, Bendix® TABS-6, Bendix® EC-30T and A-18 ABS ECUs.

The application requires the usage of RP1210B complaint adapter. A list of the recommended adapters is shown below.

RP1210B adapters

ACom™ diagnostics relies on RP1210B compliant hardware adapters for communication. **NOTE: ACom will remain in the demo mode unless there is at least one RP1210B driver installed on the computer.** The following are a list of supported hardware adapters for the software. Verify that the driver (.dll) for the adapter to be used for communications is loaded on the computer.

- Nexiq – Parallel Data Module (PDM)/USB Adapter Parallel Data Module (PDM)
- Nexiq – USB Link (USB)
- Nexiq – Wireless Vehicle Link (WVL)
- Nexiq – Heavy Duty Standard Lite Link
- Noregon – PLC-1708 Adapter
- Noregon – Data Link Adapter (DLA/USB)
- Dearborn – Adapter II, III, DPA 4 USB
- Bendix – Brake Link Adapter
- IC3Com Interface
- IC4Com USB Interface
- EZTech Link (Wireless)
- Eaton – MD 100

Known Issues with RP1210B adapters

- Tool does not support two adapters connected at the same time.
- Noregon PLC - 1708 Adapter does not support USB connection.

PC hardware requirements

ACom™ diagnostics will run on Windows 98, NT, 2000, XP, and Vista operating systems. Below are the minimum requirements for running the application.

- Intel Pentium II processor or compatible, 450 MHz
- 64 MB RAM
- 300 MB free disk space
- Microsoft Internet Explorer Version 4.1 (current version will be part of distribution CD)
- Adobe Acrobat Version 4.0 (current version will be part of distribution CD)
- Communication port
- VGA standard graphics adapter, 800 x 600 resolution (1024 x 768 primary usage)
- Window compatible keyboard and mouse

NOTE: Tool is not guaranteed to operate correctly on Windows 95 operating systems.

Technical Assistance

For any questions regarding setup or operation of ACom™ diagnostics please contact Bendix at 1-800-AIR-BRAKE (1-800-247-2725).

Additionally, monitor the Bendix website, www.bendix.com for updates to the software.

Licensing Information

BENDIX® "ACom™ diagnostic software"

END USER LICENSE AGREEMENT.

BY CLICKING ON THE "OK" BUTTON OR OPENING THE PACKAGE, YOU ARE CONSENTING TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT AGREE TO ALL OF THE TERMS OF THIS AGREEMENT, CLICK THE "CANCEL" BUTTON AND THE INSTALLATION PROCESS WILL NOT CONTINUE.

*REDISTRIBUTION NOT PERMITTED.

Bendix Commercial Vehicle Systems LLC. ("Bendix") grants you a non-exclusive, non-transferable, license to use, for your internal purposes only, the Software and Documentation, free of charge if you are (a) a customer of Bendix or (b) an employee of Bendix.

DISCLAIMER OF WARRANTY.

This Software and Documentation is provided on an "AS IS" basis, without warranty of any kind.

BENDIX MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH RESPECT TO THE SOFTWARE, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT, ALL OF WHICH ARE DISCLAIMED.

The entire risk as to the quality and performance of the Software is borne by you. Should the Software prove defective, you and not Bendix, assume the entire cost of any service and repair. This disclaimer of warranty constitutes an essential part of the Agreement. Bendix does not warrant that your use of the Software will be uninterrupted or that the operation of the Software will be error-free.

TITLE

Licensee acknowledges that title, ownership rights, and intellectual property rights in the Software and Documentation shall remain exclusively in Bendix and/or its suppliers respectively. The Software and Documentation are protected by the copyright laws and treaties. Title and related rights in the content accessed through the Software is the property of the applicable content owner and may be protected by applicable law. This License gives you no ownership rights to such content.

The license granted herein expressly excludes any right to reproduce, duplicate, copy, disassemble, decompile, distribute, sublicense, sell, assign or otherwise transfer the Software or Documentation or any part thereof without the prior written consent of Bendix. If such consent is given, and in order to protect the intellectual property of Bendix in the Software and Documentation, Licensee agrees to reproduce and incorporate appropriate Bendix notice for trade secrets, copyright or any other identifying legends in any reproductions, duplications or copies of the Software or Documentation or any part thereof made by Licensee. Notwithstanding the above, Licensee may make one (1) copy of the Software for back-up purposes only.

Licensee covenants not to disclose the Software or Documentation or any part thereof, or cause or permit the Software or Documentation, or any part thereof, to be used by any person other than approved employees of the Licensee engaged in the business activities of the Licensee on the authorized commercial equipment at the Licensee's business location. The Licensee agrees to refrain from disclosing or delivering the Software or Documentation, or any part thereof, to any unauthorized person or entity consistent with the provisions hereof.

RESERVATION OF RIGHTS

The rights granted to Licensee hereunder shall not affect the exclusive ownership by Bendix of any trademark,

copyright, patents or common law property rights of Bendix pertaining to the Software or Documentation. The license granted in this Agreement shall not be construed expressly, by implication or estopped, as the grant of a license under any trademark, patent or other intellectual property of Bendix.

THIRD PARTY RIGHTS

Bendix® ACom™ diagnostic software products may require the use of third party software products and require an additional license from such third parties to use those third party products. As of the date of this License Agreement, the following third party products are provided by Licensor with the Licensed Products; some documents included in the help of the diagnostic program requires the use of the Adobe® Acrobat® Reader. Licensee agrees that, in addition to the terms and conditions of this Agreement, any copies of Adobe® Acrobat® Reader it receives hereunder are subject to the terms and conditions of the Adobe Systems Incorporated Electronic End-User License Agreement for Adobe® Acrobat® Reader included. New releases of the Bendix® ACom™ software may contain additional third party products. Licensee agrees and acknowledges that, to the extent that the ACom™ diagnostic software applications contain any such third party software: (i) such third party software is provided on an 'as-is', pass-through basis, and as such is provided to Licensee without warranty, indemnification, support or other representation by Licensor, except as independently provided directly to Licensee from the third party licensor; (ii) Licensor bears no liability with respect to such products; and (iii) Licensee may be required to purchase new versions of such third party products as they become available and are required by the ACom™ diagnostic software.

The general help system may require the use of the Microsoft® Internet Explorer® software. Licensee agrees that, in addition to the terms and conditions of this Agreement, any copies of Microsoft® Internet Explorer® software it receives hereunder are subject to the terms and conditions of the Microsoft® End-User License Agreement for the Internet Explorer® software included. New releases of the Bendix® ACom™ software may contain additional third party products. Licensee agrees and acknowledges that, to the extent that Bendix® ACom™ diagnostic software applications contain any such third party software: (i) such third party software is provided on an 'as-is', pass-through basis, and as such is provided to Licensee without warranty, indemnification, support or other representation by Licensor, except as independently provided directly to Licensee from the third party licensor; (ii) Licensor bears no liability with respect to such products; and (iii) Licensee may be required to purchase new versions of such products as they become available and required by the ACom™ diagnostic software.

MODIFICATIONS AND IMPROVEMENTS

If the Licensee, or any of its officers, agents or employees modifies or devise any improvements in the Software or Documentation in any manner, the Licensee shall promptly disclose such modification or improvement to Bendix and Bendix shall have a non-exclusive, irrevocable, royalty free license to use such modification or improvement for any purpose including the right to grant royalty free sub-licenses thereof.

CONFIDENTIALITY

Licensee agrees to treat the ACom™ Software and Documentation as confidential proprietary information of Bendix and to use the same degree of care with such Bendix proprietary information as it uses to protect its own proprietary information, but in no event less than reasonable standard of care.

TERMINATION

The license will terminate automatically if you fail to comply with the limitations described herein. On termination, you must destroy all copies of the Software and Documentation.

LIMITATION OF LIABILITY

UNDER NO CIRCUMSTANCES AND UNDER NO LEGAL THEORY, TORT, CONTRACT, OR OTHERWISE, SHALL BENDIX OR ITS SUPPLIERS OR RESELLERS BE LIABLE TO YOU OR ANY OTHER PERSON FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY CHARACTER INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, OR ANY AND ALL OTHER COMMERCIAL DAMAGES OR LOSSES.

Installing ACom™ Diagnostics

When installing ACom™ Diagnostics it is recommended that all other programs be closed prior to running the installation.

RUN SETUP

The first screen that appears states that the installation program is going to install ACom™ Diagnostics.

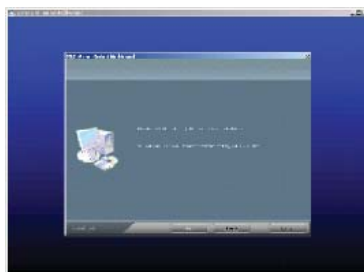


Figure 1

The next screen is a disclaimer stating, “Bendix CVS LLC can not take responsibility for incorrect usage of this program or for the stability of any other software or data previously or later installed.”

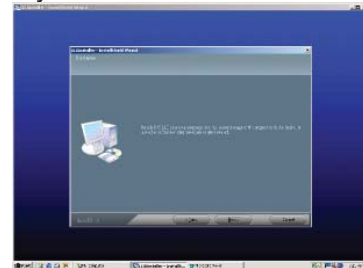


Figure 2

Then the license agreement is displayed and the user is required to accept the terms for the program to install.

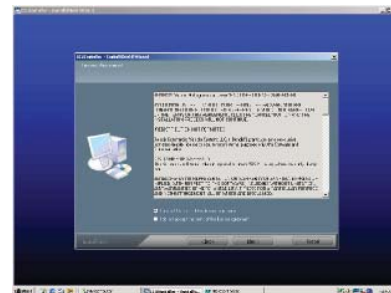


Figure 3

Now the user is asked if they want to: Install the programs automatically, uninstall the program, and install add-on programs e.g. Acrobat, or if the user needs help with installing the program.

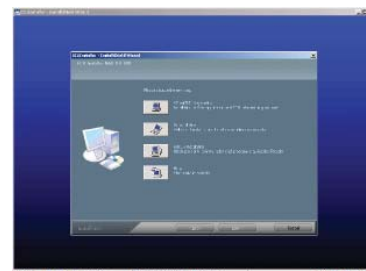


Figure 4

The user has two options available to install the program: automatic (install program selects directory for software) or customized. The custom installation method also allows the user to select specific software components to install.

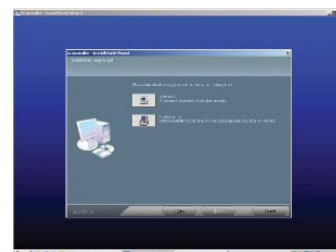


Figure 5

Next the installation window will display the disk space requirements for ACom™ Diagnostics program.

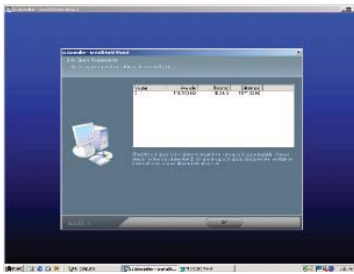


Figure 6

Install program displays that the program has been installed on the computer.

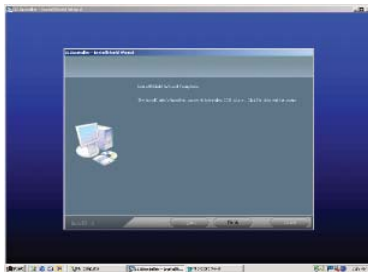


Figure 7

Uninstall ACom™ Diagnostics

If there is a need to uninstall ACom™ diagnostics it is recommended that the user: click on the “Start” button on the task bar, Program, find Bendix, ECU installer, choose “uninstall”.

Help

Provides you access to the help files available for ACom™ diagnostics. These files will provide you with information about features / operation of ACom™ diagnostics. To access the Help contents, select the Help icon from any screen or the main menu.

Demo Mode

The demo mode allows the user to get familiar with the software without having to be connected to a vehicle and an ECU. The information shown is for demonstration purposes only, and does not necessarily reflect actual conditions.

Hardware Adapter Selection

The user will be prompted to select the adapter they are using for communications. The adapter selection list is generated from the drivers installed on the computer for the RP1210B devices. Additionally, there is a vehicle interface selection button which brings up the available adapter selection list.

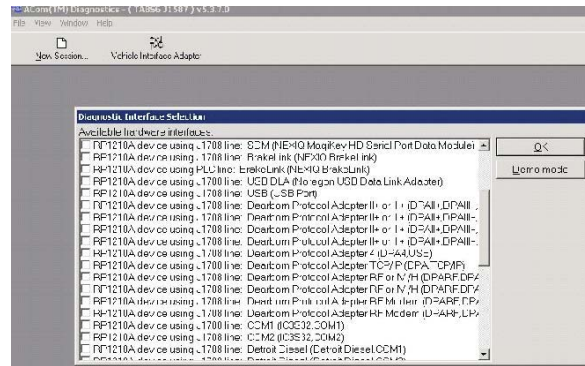


Figure 8

Functions of Software

Once communication has been established the program displays the Status screen.

The user will now be able to view the following screens for all ECUs

- ECU Status
- Diagnostic Trouble Codes
- Wheel speed
- Configuration
- Component test
- Installation test

Additional screens provided based on ECU type

- Stability Sensors (EC-60™ Advanced)
- Pressures (EC-60™ Advanced)
- Scratch Pad (Trailer ABS ECUs)
- ADL (EC-60™ and TABS-6)
- TIMS (TABS-6)

NOTE: EC-17 is only supported with ECU status, DTC and Configuration screens.

Status Screen

The status screen provides an overview of the current ABS system. Not all information is supported or available from all the ECUs, in such a case the data field will display not available (NA). Information displayed will be read once at the opening of the screen.

Input voltage, active faults and in-cab lamps will be continuously updated.

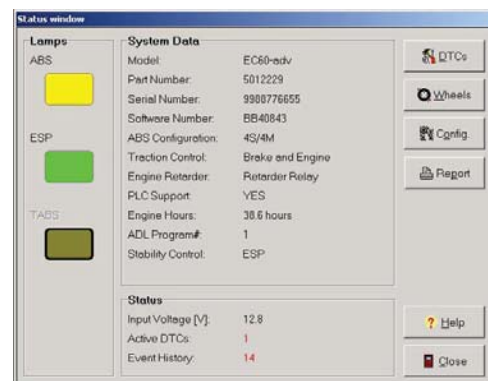


Figure 9

The following information is provided regarding the ABS ECU on the status screen:

ECU Information

Information Displayed	Explanation of information
Model	ABS ECU model reference such as EC-60™, TABS-6 , EC-17, EC-30™ / EC-30T, U12, U16, 2X, A-18
Part number	Bendix ABS ECU part number
Serial number	Bendix ABS ECU serial number
Software number	Bendix ABS ECU software release number
ABS configuration	Number of sensors and modulators the ECU is currently configured for
Traction Control	Displays mode(s) of ATC ECU is currently configured as either engine or brake, no control if ABS ECU is not configured for ATC but supports it. N/A if ECU does not support ATC
PLC support	Will only indicate when a tractor ECU can support receiving DTC information over PLC with a Yes or No
Engine hours/odometer	Will display engine hours if it is a tractor, displays odometer mileage if a trailer or displays N/A if information is not available
ADL Program #	Will display the ADL Program the ABS ECU currently has programmed in it.
Stability Control OR TIMS	Will display only if the ABS ECU supports any stability control OR Trailer ABS 6 supports Tire Inflation and Monitoring System

Status Information

Information Displayed	Explanation of information
Input Voltage	The battery voltage read at the power input connections to the ABS ECU
Active DTCs	The number of active diagnostic trouble codes read from the ABS ECU.
Event History	The number of diagnostic trouble codes recorded in the ABS ECU history. Will not show if ECU does not support this function. This information is read once when screen is opened.
Active TIMS	The number of active diagnostic trouble codes for the TABS-6 w/TIMS
Inactive TIMS	The number of inactive diagnostic trouble codes for the TABS-6 w/TIMS

Status information

The TIMS DTC information is displayed in addition to the typical ABS ECU information.

Status	
Input Voltage [V]:	12.6
Active DTCs:	2
Event History:	30
Active TIMS DTCs:	Not available
Inactive TIMS DTCs:	Not available

Figure 10

Lamps

Lamp	If lamp is illuminated (highlighted) this indicates diagnostic trouble code(s) within the ABS and/or ATC system
ABS	ABS indicator lamp when illuminated indicates active diagnostic trouble code(s) with a component in the ABS system. User may double click on illuminated lamp to go to DTC screen
ATC or ESP or TIMS	ATC indicator lamp when illuminated indicates active diagnostic trouble code with a component in the ATC system. User may double click on illuminated lamp to go to DTC screen. NOTE: Will display ESP if the ABS ECU supports the stability control Or Display TIMS if the TABS-6 ABS ECU supports Tire Inflation and Monitoring System
TABS	Trailer in cab ABS indicator lamp indicates current status of trailer ABS indicator lamp in the cab of the tractor. The tractor ABS ECU must support PLC functionality with a PLC complaint trailer in order for the lamp to illuminate

Control Buttons

DTCs	Will launch diagnostic trouble code screen
Wheels	Will launch wheel speed screen
Config	Will launch configuration screen
Report	Provides a report of the status information which can be e-mailed, faxed, saved
Help	Will launch the help for status screen
Close	Will close the status screen

Diagnostic Trouble Code Screen

The diagnostic trouble code window has three main parts: active diagnostic trouble codes, inactive or memorized diagnostic trouble codes, and event history. One or more of these tabs may not appear in the window, because they are ABS ECU dependent. All active diagnostic trouble codes (DTC's) are displayed "real" time, which means the ABS ECU is reporting a currently active DTC. Inactive/Memorized diagnostic trouble codes are DTCs, which were active in the past. Event history entries are chronological listing of DTCs and other events, maintained by the ABS ECU.

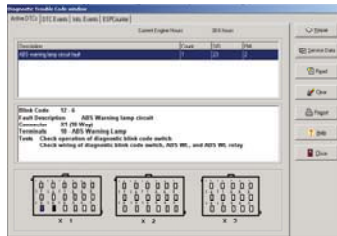


Figure 11

Diagnostic Trouble Code Window Tabs

Active diagnostic trouble code tab will be displayed for all ABS ECU's, while the inactive diagnostic trouble code will only be displayed with U12, U16, ABS 2X, A18, and TABS-6 ABS ECUs. The event tab will be displayed for EC-17, EC-30™, EC-30T, EC-60™ controller and TABS-6. The Advanced EC-60™ ECU has an additional tab, ESP Counter. The TABS-6 with Tire Inflation and Monitoring System (TIMS) will have two additional tabs for Active and Inactive TIMS DTCs.

 


Figure 12

Diagnostic Trouble Code Specific Information

Active diagnostic trouble code information consists of descriptions, occurrence counts, sub-system identifiers (SID), and failure mode identifiers (FMI). Reference service data sheets for more information. If the ABS ECU does not support occurrence count information, N/A will be displayed. Additionally, each tab will display the current odometer (trailer) / engine hours (tractor) depending on the ABS ECU and what it supports.

Diagnostic Trouble Code window				
Active DTCs DTC Events Info. Events				
		Current Engine Hours:	N/A	
Description	Count	SID	FMI	
Drive Axle Right WSS: open or shorted	1	4	2	
Drive Axle Left WSS: open or shorted	1	3	2	

Figure 13

Troubleshooting Information

The embedded bitmap and test information will show the connectors with highlighted terminal locations to assist in troubleshooting. Highlighting the selected diagnostic trouble code will provide Service Data Sheet information, on how to fix the diagnostic trouble code in the panel below the active DTC description.

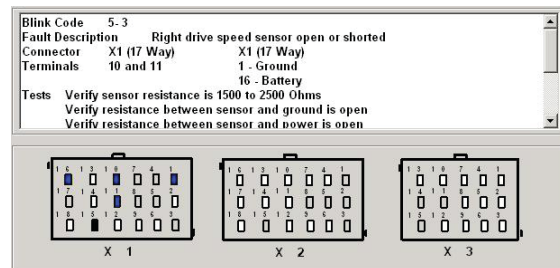


Figure 14

Diagnostic Trouble Code Events

Diagnostic trouble code events are stored in this section. These events are stored in chronological order, with the newest event displayed first in the list. The **Description** column is the text indicating the particular diagnostic trouble code event. The **Occurrence Counts** column displays how many times a DTC has happened. If the DTC occurs consecutively there will be an entry of the original DTC and the last DTC. The last DTC will indicate how many times the DTC has occurred since the first, but not including the first occurrence. The **Power Up Time** column is a time stamp indicating when the DTC occurred after power up. There are 4 possible time stamps: 0 to 10 seconds, 10 seconds to 15 minutes, 15 minutes to 1 hour, and greater than 1 hour. The **Vehicle Velocity** is the vehicle speed at which the diagnostic trouble code occurred. The B is the mileage at which the diagnostic trouble code occurred. The **Time Stamp** is a record of when the event occurred in terms of either power cycles or engine hours. The power cycle time stamp is recorded when engine hours is unavailable and identifies how many power cycles ago the event occurred. The power cycle time stamp stops counting when the value of 255 has been reached.

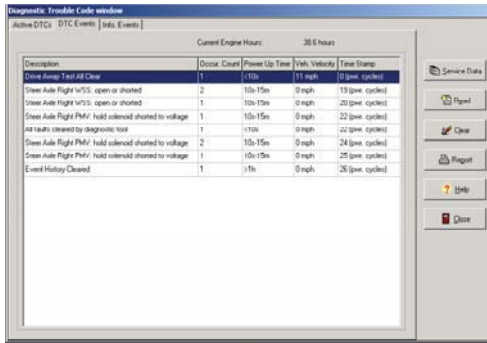


Figure 15

When engine hours are available, the time stamp will be displayed (displayed hhhh:mm, h=hours and m=minutes) for a tractor or the odometer for a trailer. Current engine hours are provided at the top of the screen.

Current Engine Hours: 38.6 hours	
Occur. Count	Power Up Time
Veh. Velocity	Time Stamp

Figure 16

Diagnostic Trouble Code Information Events

The comments (not DTC information) are stored in the same manner as diagnostic trouble code entries.



Figure 17

ESP Counter

ESP counter provides a listing of the ESP events that have occurred. The listing identifies the event, displays a counter for number of times event has occurred, and the engine hours of the last event.

Diagnostic Trouble Code window	
Active DTCs DTC Events Info Events ESP Counter	
Event	Counter
RSP Level 1	0
RSP Level 2	0
RSP Level 3	0
RSP Level 4	0
RSP Level 5	0
Yaw Control Level 1	2
Yaw Control Level 2	0
Yaw Control Level 3	0
Yaw Control Level 4	0
Yaw Control Level 5	0

Figure 18

TIMS DTC TABS

The TIMS diagnostic trouble codes will be displayed in the following tabs, Active TIMS and Inactive TIMS.

 


Figure 19

Control Buttons

Repair	Launches detailed repair information for ONLY sensor and modulator DTCs.
Service Data	Launches the service data sheet
Read	Manually command a read of the ECU. This is dependent upon which tab is active. Active diagnostic trouble codes will always automatically refresh.
Clear	Clears the diagnostic trouble codes, depending on the active tab, this function will send a clear command for active, inactive (including TIMS active and inactive) or the event history, and information events.
Report	This will launch a dialog and prompt the user for more specific platform and user information, and provide a written record of the system diagnostic trouble code(s) in question.
Help	Launches Help dialog
Close	Closes diagnostic trouble code screen

Configuration Screen

The configuration screen is used to display the ABS ECU system configurations. Any unregistered or incorrect configuration will cause the ECU to generate a diagnostic trouble code, and the configuration will not be changed. Therefore, any change to the system must be fully understood by the user. If any questions should arise, consult Bendix for clarification. Call 1-800-AIR-BRAKE or, visit on the web @ www.bendix.com.

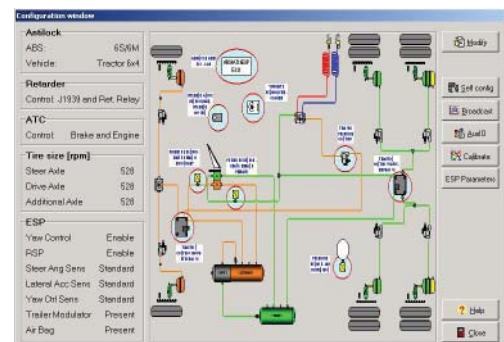


Figure 20

Antilock

The antilock section displays the current number of sensors and modulators of the system.



Figure 21

Additional Axle for Trailer

The additional axle for trailer will display if the axle is a lift or not lift axle only for configurations of 4S/2M and 4S/3M.



Figure 22

Retarder

The retarder section displays the current control of the retarder.



Figure 23

ATC

The ATC section displays the current configuration of the Automatic Traction Control system.



Figure 24

Odometer

The odometer section displays the current odometer reading. The trip odometer reading is the odometer mileage since the odometer was cleared. The service odometer is the mileage left before service is needed.

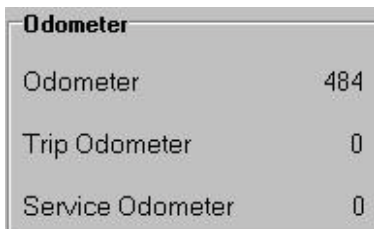


Figure 25

Tire Size

The tire size section displays the current rolling radius value programmed into the ABS ECU. These values are for both tires on one axle. These are dependent on the circumference of the tire, and how many complete revolutions the tire makes over one mile. These values should be obtained from the tire manufacturer and typically are different for each tire model. The tool assumes a tone ring with 100 teeth.

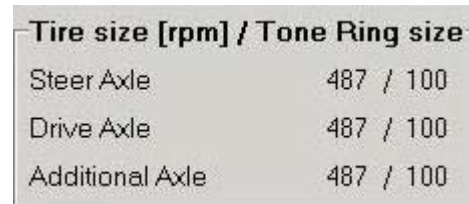


Figure 26

Note: The actual value of tire size may be slightly different than the value inputted due to scaling of calculation.

 


Figure 27

ESP

The ESP section displays a list of ESP parameters stating if they are enabled or disabled. Additionally, a listing of the stability sensors indicating they're mounted as standard or inverted.



Figure 28

Configuration Diagram

The diagram will reflect the typical ABS installation for the configuration read from the ABS ECU.

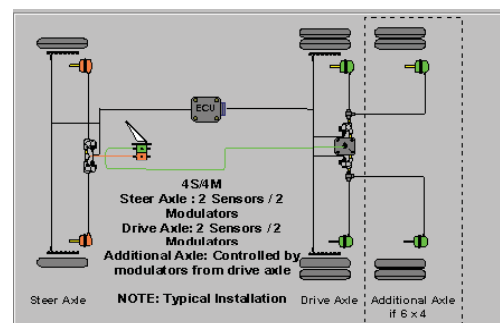


Figure 29

Control Buttons

Modify	Launches the Configuration Modification screen
Self Config	Performs a self configuration of the ABS System
Broadcast	Launches the Broadcast options
AUX I/O	Launches a window displaying the status of the auxiliary inputs / outputs
Calibrate (Advanced Only)	Launches the sensor calibration services the Advanced ESP sensors require.
ESP Parameters (Advanced Only)	Launches the ESP parameter information. Once the window has been launched a save parameter option becomes available.
Help	Launches Help system
Close	Closes the configuration screen

Modify Button

The modify button opens the change configuration window allowing the following configuration information to be changed: Antilock number of sensors and modulators, Tire size, Retarder, ATC.

NOTE: ESP parameters are read only.

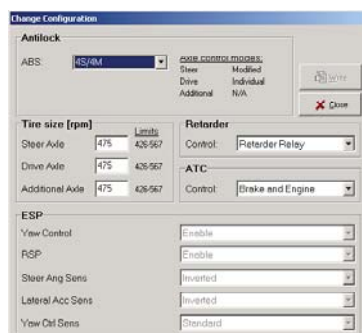


Figure 30

Antilock

This field will show the available sensor / modulator combinations for the ABS ECU. Trailer applications will display the control method along with the sensor / modulator combination. Consult Bendix if you are unsure how to correctly configure these parameters.

Possible configurations are listed below.

Configuration		
Tractor	4S / 4M	
	6S / 4M	
	6S / 5M	
	6S / 6M	
Trailer	4S / 3M	Control will be either axle or side
	4S / 2M	
	2S / 1M	
	2S / 2M	

Tire Size

Tire size is adjustable to within the limits available for the ABS ECU. Consult the tire manufacturer specifications for these values. Additionally, the ECU will set a DTC if the tire sizes are out of range. **NOTE: The program assumes that a 100-tooth tone ring is being used. The tire size read back from the ECU may not be what the user selected because of how the tool scales the values.**

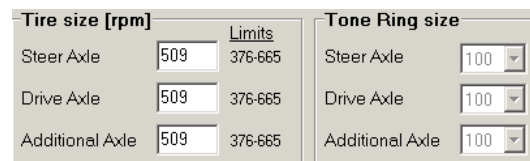


Figure 31

NOTE: ACom Diagnostics 5.3 and up allow the tone ring to be changed for the TABS-6 ONLY.

Retarder

The available control methods are typically:

Not Controlled – No retarder control for this configuration

Retarder Relay – Retarder controlled by a retarder disable relay

Retarder Data link – Retarder controlled by J1939 communications

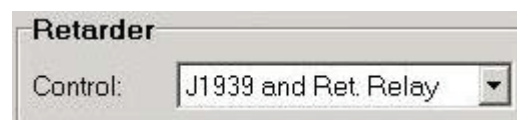


Figure 32

ATC

The available control methods are:

No Control – No traction control present or enabled

Brake – Brake control is automatically activated when drive wheel(s) on one side of the vehicle are spinning, which typically occurs on a split-coefficient surface (such as asphalt and ice). The traction system will then lightly apply the brake to the drive wheel(s) that are spinning. The vehicle differential will then drive the wheels on the other side of the vehicle. Brake control is available at vehicle speeds up to 25 MPH.

Brake / Engine

For optimal ATC performance, both engine and brake control methods are recommended. Engine control is automatically activated to control the wheel slip of the driven axle(s). This is accomplished by sending a J1939 torque limitation request to the engine ECU. Engine control must follow SAE J1939 protocol. Bendix CVS approval is required for all new applications. Engine control is available at all vehicle speeds.

 


Figure 33

Additional Axle (Trailer ONLY TABS 6)

The additional axle is configurable only if the ABS configuration is 4S/2M or 4S/3M.

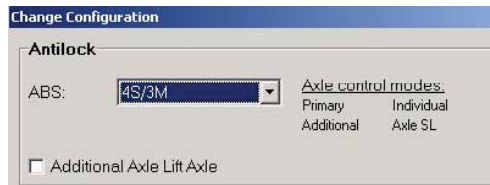


Figure 34

Odometer (Trailer ONLY)

The odometer displays the accumulated mileage of the ECU. The trip odometer can be reset. The service interval mileage is set here.

NOTE: The odometer write can not be set below the actual accumulated mileage stored in the ECU. The service odometer can be set to a mileage for service intervals. Any values inputted for odometer need to be positive numbers. If the number inputted is not correct the screen will remain with change.

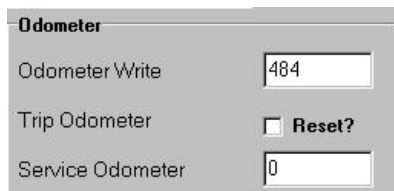


Figure 35

Broadcast Options

This screen is for configuring broadcast parameters. There are generally three different data links in which messages can be broadcast: J1939, J1587 (J1708), or J2497 (PLC) depending on the ABS ECU. These broadcast messages are typically used by other components on the vehicle links.

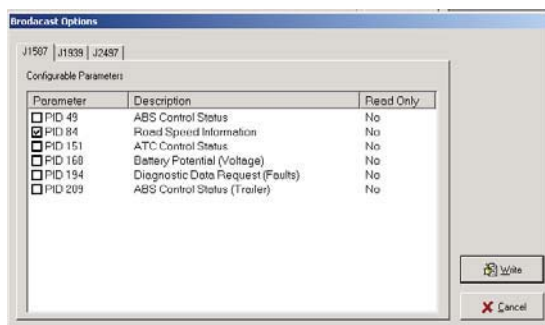


Figure 36

AUX I/O

This screen is available for some tractor and trailer ECUs only. It displays the configuration for the auxiliary inputs and outputs. The type will display what the auxiliary is configured as either input, output, input ADL or output ADL. The mode is either off, digital, analog, or tristate.

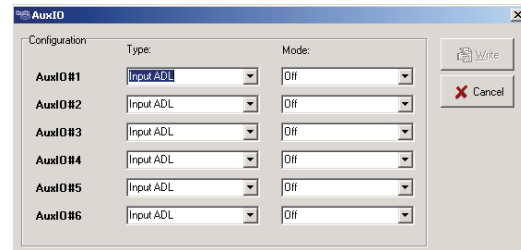


Figure 37

Control Buttons

Write	Writes new configuration
Cancel	Closes window

Calibrate

This test is available only if the ABS ECU is an Advanced EC-60™, providing calibration for steering angle and lateral acceleration sensors.

Start begins the calibration; the current step will display information / instructions that the user will have to perform and acknowledge in order for calibration to occur.

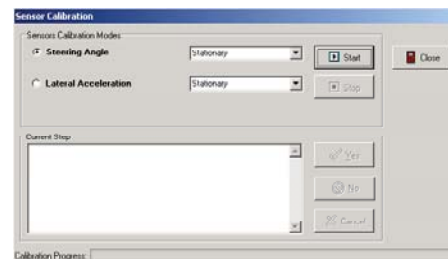


Figure 38

Control Buttons

Start	Begins calibration
Stop	Stops calibration
Yes	Acknowledges condition needed to continue
No	Allows condition to be met
Cancel	Stops calibration
Close	Closes dialog

Wheel Speed Screen

This screen allows the user to monitor wheel speeds. Along with this functionality, the user has the ability to perform data acquisition of the wheel speeds and save the results to a comma delimited file. The wheel speeds may be monitored both graphically and numerically.

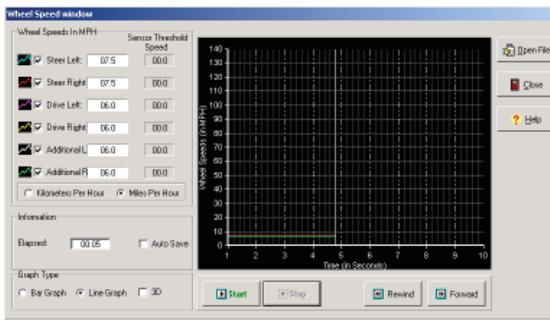


Figure 39

Manipulating Graphs

The user is able to display graphical data in either line or bar graph form. It is possible to switch between the two types of graphs through the “Graph Type” region of the wheel speed screen.



Figure 40

Numeric Display of Data

The number of wheels displayed in each graph is configurable. Notice the “wheel speeds in MPH” region of the screen has check boxes. If the boxes are checked, the data for that wheel speed will be displayed. In order to remove a particular wheel from the graph screen; simply uncheck the box beside its name.

Each wheel speed is displayed in the same color as shown in the wheel speed box.

Also the user can select between miles per hour and kilometer per hour by selecting the correct radio button.

The value displayed under the wording of Sensor Threshold speed indicates the strength of the sensor signal in relationship to the sensor gap.

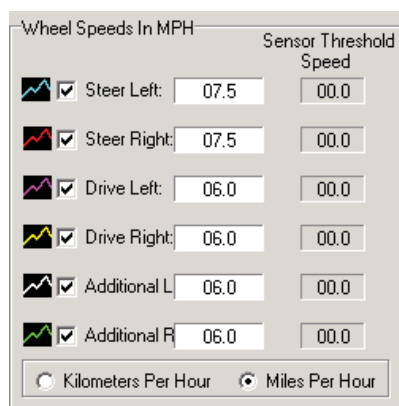


Figure 41

Data Acquisition of Wheel Speeds

It is possible to log data collected by the wheel speed screen and save it to a comma delimited file. Before attempting this, please ensure that settings such as units and graph type are set to their desired settings,

as they can not be changed once data logging has begun.

Data Acquisition Control Buttons

Start	Begins data logging
Stop	Ends data logging session
Rewind	Allows user to move backwards in time through the data
Forward	Allows user to move forward in time through the data



Figure 42

Information

The “elapsed” field of this region refers to the elapsed time of the current data logging session. In other words, how long data has been recording, since the start button was pressed. If the “auto save” check box is selected before the data logging procedure begins, the user will be immediately prompted to enter a file name. When the stop button is pressed at the end of a data logging session, the data will automatically be saved to the file that was created by the user. Each subsequent data trace will be saved under an auto-incremented file name with no further input from the user. If the “auto save” checkbox is not selected, the user will be prompted to enter a file name, if they wish to save the data they have recorded as the result of a data logging session.

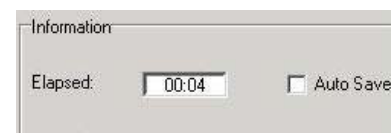


Figure 43

Viewing Saved Data

The user is able to view saved data at a later time by pressing the “Open File” button. Once the open file button has been pressed the user will be prompted to select the data file that they want to view.



Figure 44

Control Buttons

Open	Opens saved data
Close	Closes the configuration screen
Help	Launches Help System

Component Test

This window enables the user to test the connection to various components that interface with the ABS ECU. If the expected results are not observed, the user is able to retrieve service data information to assist in resolving the issue. All tests, except the sensor test,

are intended to be performed with the vehicle parked. Before a test can be initiated the user will be prompted to acknowledge a warning regarding the vehicle being parked on a level flat surface with wheels blocked and keep hands, feet etc. away from moving parts.

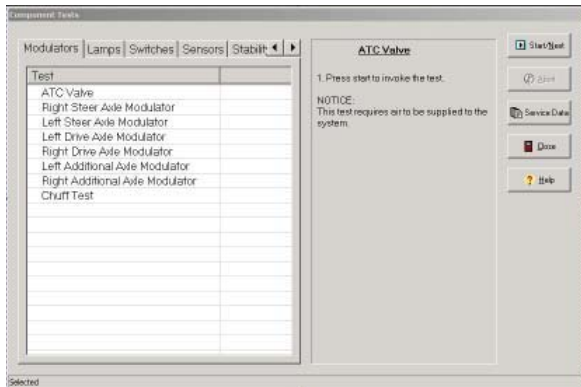


Figure 45

Test Selection

The test selection region allows the user to choose a test to conduct. There are a maximum of six different tabs to choose from Modulators, Lamps, Switches, Sensors, ESP and Miscellaneous. Depending on the type of ECU and its' configuration, will determine which tests are available. Furthermore, within a given test list, only tests that are valid for the ABS ECU and its' configuration will be visible. To navigate between these categories, the user clicks on the corresponding tab at the top of the region. After selecting which component to test, a list of valid tests will be displayed. Aside from the list of valid tests, status is only displayed when test is selected.

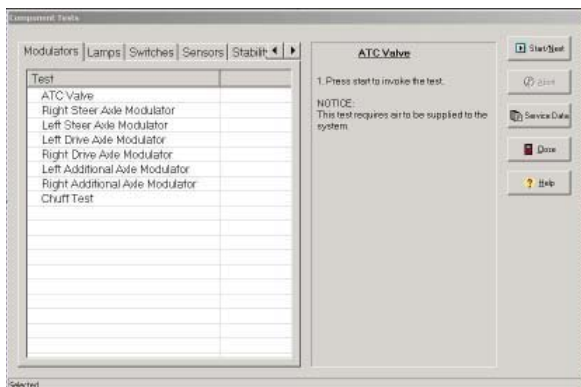


Figure 46

Modulator Tests

Given the current configuration of the ECU, a list of modulator tests will appear in the "Modulator Test Region". A modulator test consists of actuating a given modulator, to produce an audible sound. By listening to the sound that is made, the user will be able to determine if it is functioning properly or not. The user can select which modulator to test. The program provides instructions for the test in the window.

A chuff test is a test of all of the known modulators on the system, given the current configuration of the ECU. This test is conducted in two cycles. Each modulator is chuffed once during the first cycle, then again on the second cycle. After each test, the user will be asked to verify that the selected modulator, or in the case of the chuff test, all modulators behaved correctly.

The chuff test sequence is:

- Steer axle right
- Steer axle left
- Drive axle right
- Drive axle left
- Additional axle right
- Additional axle left

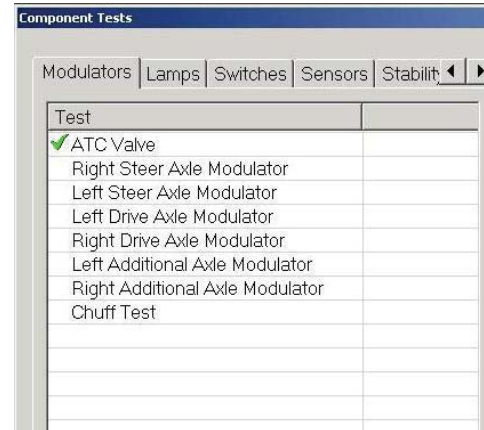


Figure 47

The tables below indicate which modulators are valid for a given configuration of the ECU.

Trailer		
Config	PCV A	PCV B
2S/1M	X	
2S/2M	X	X
4S/2M	X	X

Tractor			
Config	4S/4M	6S/4M	6S/6M
Left Str	X	X	X
Right Str	X	X	X
Left Drv	X	X	X
Right Drv	X	X	X
Left Add			X
Right Add			X

Lamp Test

The indicator lamps are testable. During the lamp test, the desired lamp will be turned on and off. The user will be asked to verify that the selected lamp behaved in the described manner. Lamps listed will be based on the ECU model and configuration.

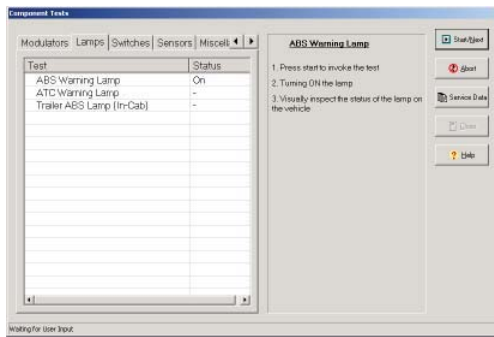


Figure 48

Switch Test

The purpose of a given switch test is to determine if the circuit for that switch is operational. Once the test has begun, the user will be prompted to toggle the given switch to a requested position and verify the status of the switch. Switch tests listed will be based on ECU model and configuration.

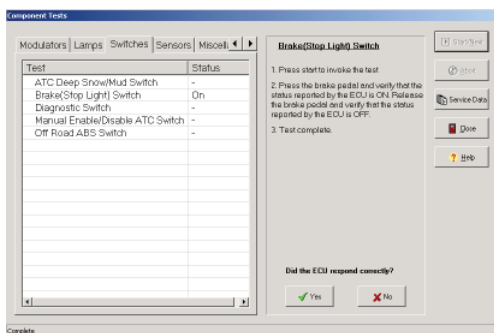


Figure 49

Sensor Test

The purpose of the sensor test is to determine if the sensor gap is correct by outputting voltage. Once the test has begun, the user will be prompted by the instructions on how to perform the test. A particular wheel will need to be spun, the tool will provide the MPH reading, the user will need to press start/next, the instructions will state test complete, and finally the program asks the user to acknowledge whether or not the ECU responded correctly.

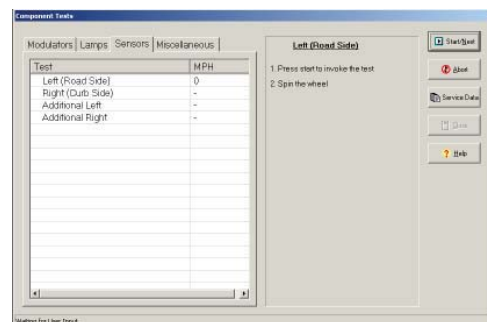


Figure 50

ESP Tests

The purpose of the ESP tests is to verify the operation of various ESP components. Steering angle checks the output of sensor versus the movement of the steering wheel. Yaw rate / Lateral acceleration is used to provide an indication of the vehicle lateral acceleration and rotation around the vertical axis. Primary pressure monitors the primary pressure of the air system. Secondary pressure monitors the secondary pressure of the system. Air bag sensor monitors the air bag pressure. ESP valves provide the testing of the front ATC valve and trailer control modulator. Once the program has begun, the user will be prompted to do various operations; the program will display status. The program asks the user to acknowledge whether or not the ECU responded correctly.

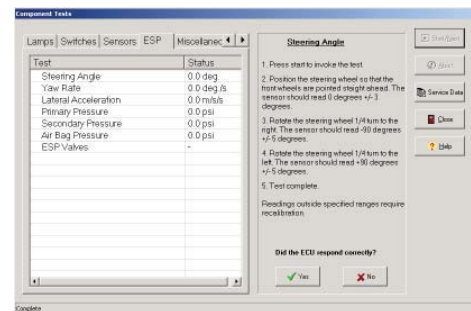


Figure 51

Miscellaneous Tests

The following tests are available under this category battery voltage test, Aux I/O, and the engine limiting test (EC-60 only). The battery voltage test is available on any ECU with any configuration. During this test, both the loaded and unloaded battery voltages are tested. The user is instructed to make sure that these measured values fall between the operating range of the ABS ECU. At the end of this test the user is asked if the voltages are acceptable or not.

✓ Battery Voltage	12.15
-------------------	-------

Figure 52

The AUX I/O will test the auxiliary input or output.

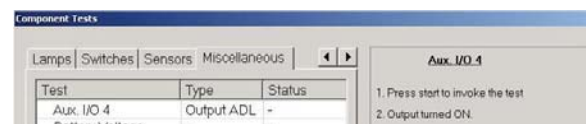


Figure 53

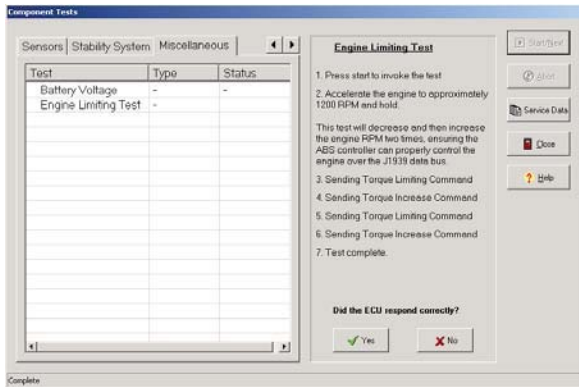


Figure 54

Engine limiting test will test whether or not the J1939 command to increase the engine torque is being sent out. The user is asked to rev the engine to 1200 RPM, hold it while the test sends out commands to increase, decrease, increase, decrease the torque.

Conducting a Test

All tests are controlled via the control buttons on the right side of the screen.

Start/Next	Initiates the selected test
Abort	Cancels the selected test
Service Data	Displays service data information
Help	Launches Help system
Close	Closes the configuration screen

Example Test

To run a test:

1. Select a test to run from the test selection.
2. Press the "Start/Next" button.
3. Follow the instructions shown in the "Test Procedure Region" of the window.
4. After the instructions have been followed and the test complete, the user will be asked if the test was successful or not, "Did the ECU respond correctly?" If the ECU did respond correctly, press "Yes" and a green check mark will appear next to the name of the test in the "Test Selection Region". Otherwise, press "No", a red "X" will appear.

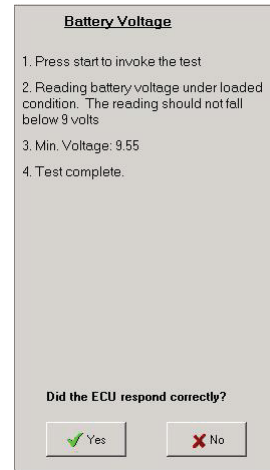


Figure 55

Installation Test

NOTE: The installation test is for reference only; it does not replace the need for an automated end of line test process.



Figure 56

The installation test window will open up and wait for user input. Either customize the test or start the test.

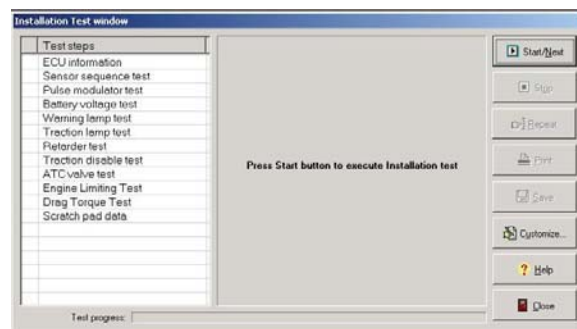


Figure 57

Customize

This allows the user to customize various aspects of the installation test. Such as change the order in which tests are performed. This is accomplished by selecting the test and then selecting up or down. Additionally, the user has the discretion to omit specific tests according to the OEM's vehicle quality testing needs. This is accomplished by selecting (check mark) or deselecting (no check mark) which test to perform. ECU information and Scratch pad information are not configurable, meaning they will always be part of the test sequence.

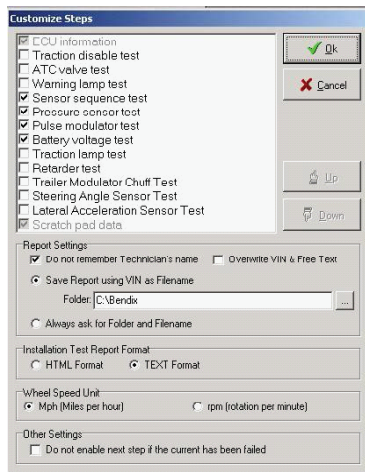


Figure 58

Report Settings

The report settings portion of Customize allows the user to save the report using the VIN as the file name and to select the folder to save the report in or the user can select to always have to enter the folder and file name for the report. Additionally, the user can select the feature of remembering the technician name for the report so it will not have to be entered every time. If the overwrite VIN & Free Text is checked this will take the information from the installation test scratch pad and write into the OEM and Fleet scratch pads.

Installation Test Report Format

The installation report format is selectable either HTML or TEXT.

Wheel Speed Unit

The wheel speed unit allows for the wheel speed information to be recorded in MPH or RPM (rotation per minute).

Other Settings

The last option will disable the program from going to the next step until a failed step has been corrected.

Report

The report can be printed at the end of the installation test or saved for printing or record retention. Again the report can be saved in either HTML or Text. The report provides ECU information, the results of the test.

Test Steps

A green check mark will be displayed when a test passes. Similarly, a red "X" will be displayed should the test fail. Some tests will require the user to respond if the test data is good in order for test to complete.

ECU Information

This test will provide the user specific ABS ECU information. If any data can not be read from the ABS ECU, the Start/Next button will not enable. This maintains the integrity of the overall test and ensures components are available for testing.


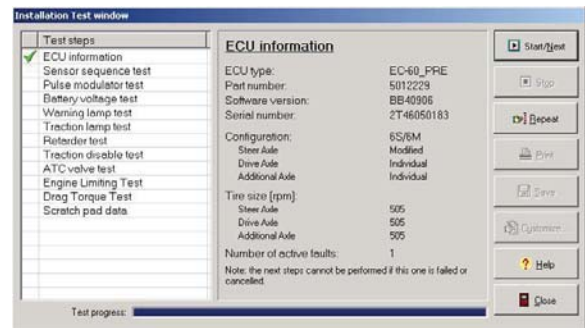


Figure 59


Sensor Sequence Test

This test verifies the correct installation of the wheel speed sensors. The tractor and trailer sensor sequence test are different. The trailer sensor sequence test will display order in which the wheels are to be rotated is listed under the heading Prescribed Order. The current prescribed order is, right (curbside), right additional (if equipped), left additional (if equipped), left (roadside). The second column displays the speed, which was read. The third column shows the actual order in which wheel speeds were read. The wheel speed must be greater than 1.0 MPH to be considered a valid reading.

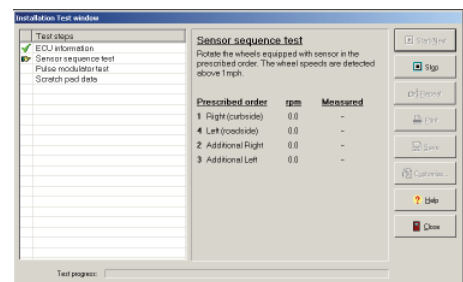

Trailer
Figure 60


The tractor sensor sequence test will display order in which the wheels are to be rotated is listed under the heading Prescribed Order. The current prescribed order is: right then left steer axle, drive axle and additional axle (if equipped). The second column displays the speed, which was read. The third column shows the actual order in which wheel speeds were read. The wheel speed must be above 1.0 MPH to be considered a valid reading

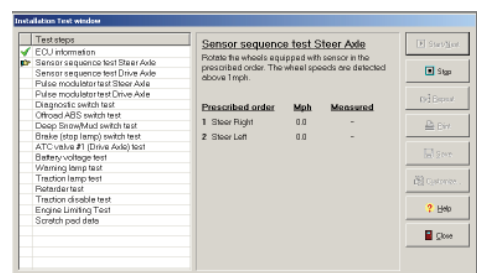

Tractor
Figure 61


Pulse Modulator Test

This test verifies whether the modulator(s) are installed correctly. The tractor and trailer pulse modulator sequence test are different. The trailer pulse modulator test will display order in which the modulators will be energized. The test energizes the modulator(s) in the predefined order: right (curbside) and left (curbside) if axle control, then right additional (if equipped) and left additional (if equipped). The tester will validate a correct response on the vehicle. At the completion of all modulators being energized, the program will ask the tester whether the modulator(s) responded correctly.

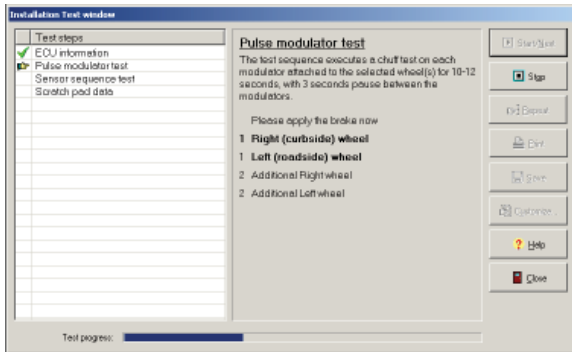

Trailer
Figure 62

The tractor pulse modulator test will test energizes the modulator(s) in the predefined order. The test energizes the modulator(s) in the predefined order by axle: steer axle right and left, drive axle right and left, then additional axle right and left. The tester will validate a correct response on the vehicle. At the completion of all modulators being energized, the program will ask the tester whether the modulator(s) responded correctly.

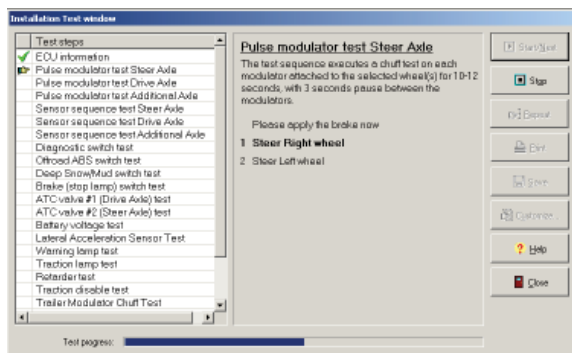

Tractor
Figure 63

Battery Voltage Test

This test verifies the battery voltage in an unloaded and loaded state (modulators energized). The lowest detected voltage will be displayed after the tests are finished. The tester is asked to confirm the result of the test.

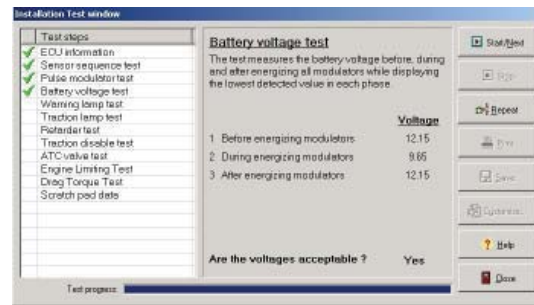


Figure 64

Indicator Lamp Test

This test shall verify the wiring of the lamp and the ABS ECU's ability to illuminate the lamp. The tester is asked to confirm the result of the test.

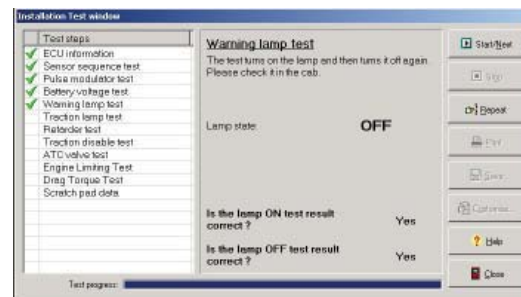


Figure 65

Traction Lamp Test

This test verifies the wiring of the lamp and the ABS ECU's ability to illuminate the lamp. The tester is asked to confirm the result of the test.

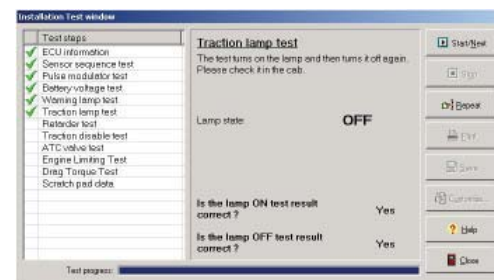


Figure 66

Retarder Test

This test shall verify the operation of the retarder by enabling and disabling the retarder while the user revs the engine and listens for retarder to be enabled or disabled. The tester is asked to confirm the result of the test.

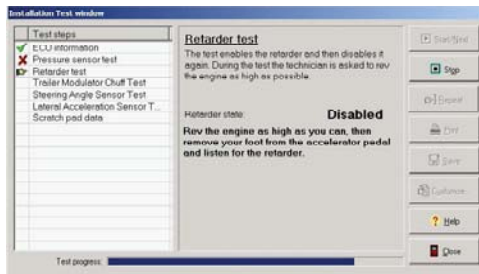


Figure 67

Traction Disable Test

This test verifies that the traction control system can be disabled.

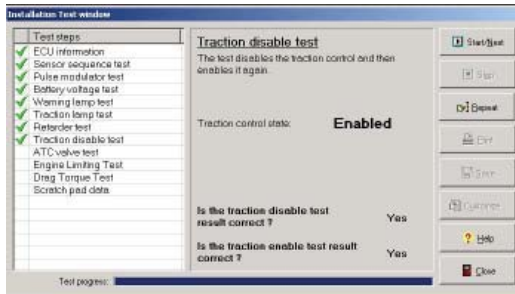


Figure 68

ATC Valve Test

This test will verify the wiring and plumbing of the ATC valve and the ABS ECU's ability to energize the modulator for 3.5 seconds wait 3 seconds and then re-energize the traction modulator for another 3.5 seconds.

The tester will be asked to confirm the results of the test.

If the vehicle has ESP it will have an additional ATC valve on the steer axle of the vehicle.

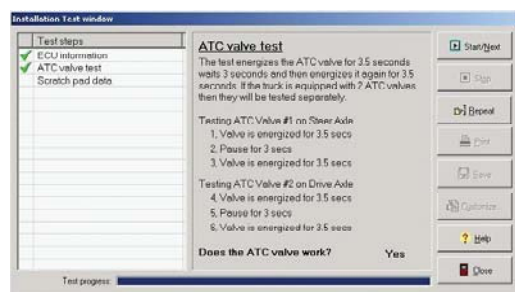


Figure 69

Trailer Modulator Chuff Test

This test is available only if the ABS ECU is an Advanced EC-60™. The test verifies the trailer modulator is functioning correctly when the foot brake is applied, while the program energizes the modulators, and the user listens for air or no air being exhausted.

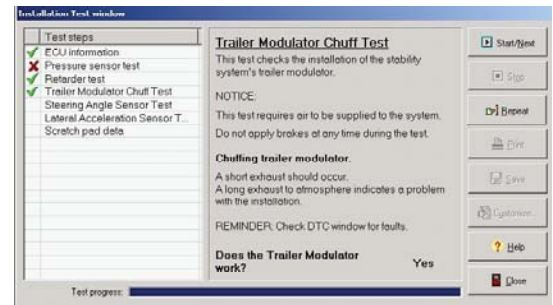


Figure 70

Steering Angle Sensor Test

This test is available only if the ABS ECU is an Advanced EC-60™. The test verifies the operation of the steering angle sensor. The user will be asked to have the steering straight for 30 seconds, then turn the steering wheel to the right 1/4 turn for 30 seconds and then to the left a 1/4 turn for 30 seconds. The program reads the steering angle output during the 30 seconds and displays it on the screen.

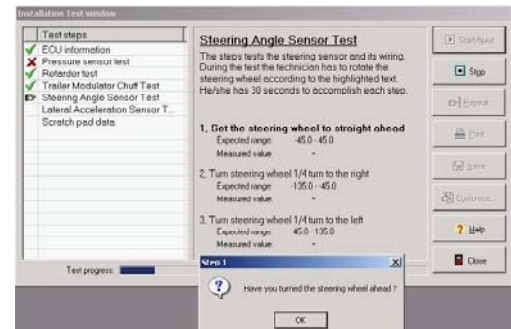


Figure 71

Pressure Sensor Test

This test is available only if the ABS ECU is an Advanced EC-60™. The test verifies the operation of the pressure sensors installed at the primary and secondary delivery ports of the foot valve plus the air bag suspension if vehicle is so equipped. The test allows the user 30 seconds for each step, first make sure the air system is fully charged, apply the foot valve, and finally release the foot valve. The program pops up windows to ask user to confirm the action required, once the user acknowledges with an affirmative the program displays the pressures read.

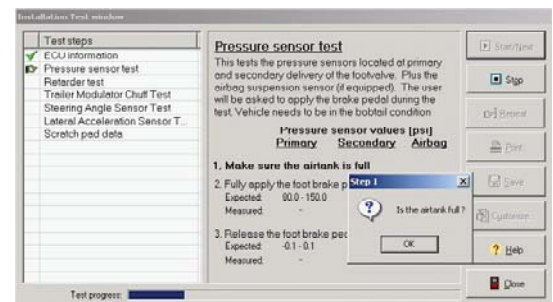


Figure 72

Lateral Acceleration Sensor Test

This test is available only if the ABS ECU is an Advanced EC-60™. The test verifies the operation of the lateral acceleration sensor.

The program provides the reading of the sensor at the end of the test.

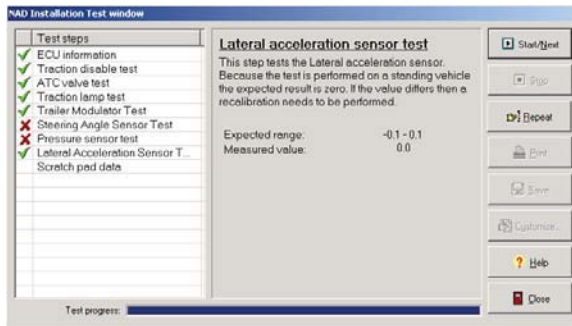


Figure 73

Engine Limiting (EC-60 Only)

Engine limiting test will test whether or not the J1939 command to increase the engine torque is being sent out. The user is asked to rev the engine to 1200 RPM hold it while the test sends out commands to increase, decrease, increase, decrease the torque.

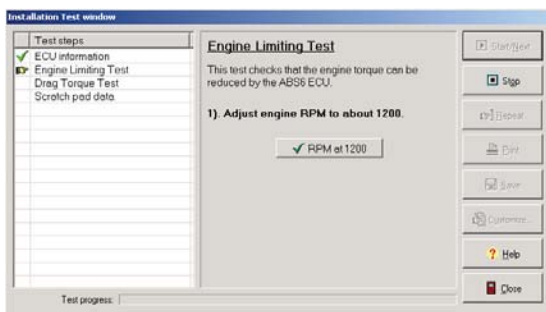


Figure 74

Switch Test

The following switch tests are available for the EC-60 ABS ECU: diagnostic switch, off road ABS switch, deep mud / snow switch, and brake (stop) lamp switch. All the tests provide the user with instructions to toggle the switch and view the appropriate dash or stop lamp for activity.

Diagnostic Switch

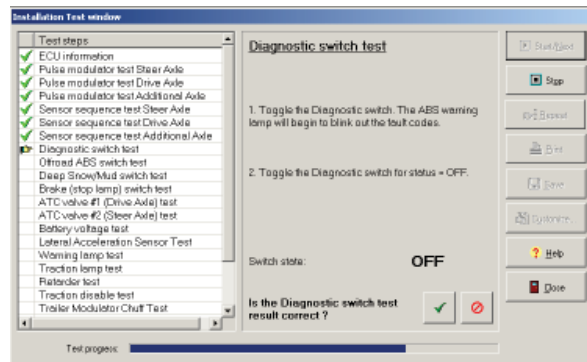


Figure 75

Off Road Switch

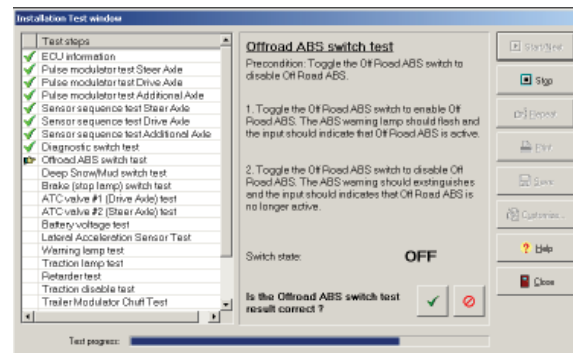


Figure 76

Deep Mud / Snow Switch

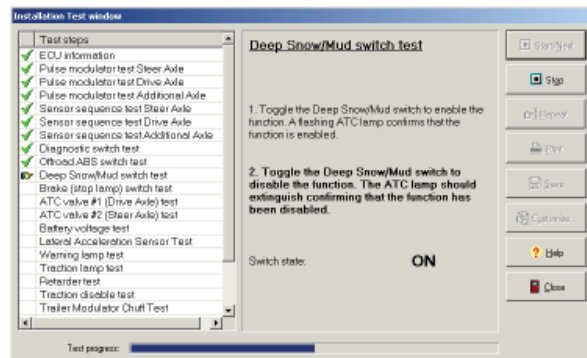


Figure 77

Stop (Brake) Lamp Switch

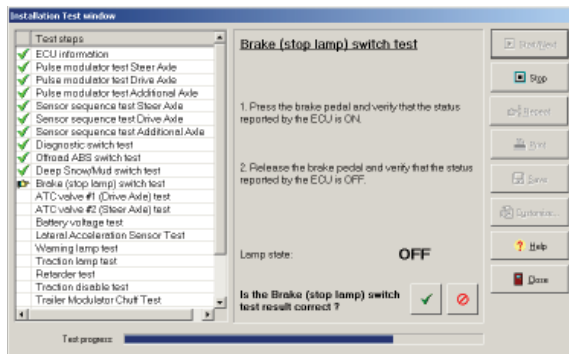


Figure 78

Scratch Pad

The tester is requested to input data into the fields displayed on the screen. This data will be stored in a file for use by the program. If the ABS ECU supports scratch pad capability, a confirmation dialog will appear and ask the tester to proceed. Once the information is written, a "test complete" dialog box pops up stating "Use the Save or Print Button to Create the Report".

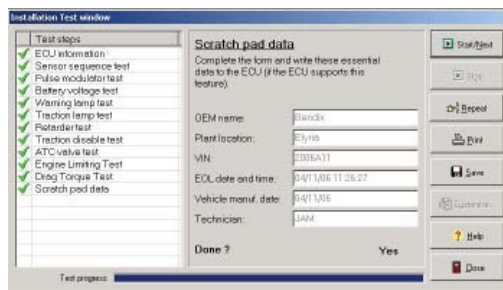


Figure 79

Control Buttons

Start/Next	Initiates the selected test
Stop	Stops current test
Repeat	Repeats current test
Print	Prints test report
Save	Saves test report to file
Customize	Customizes test process
Help	Launches Help system
Close	Closes the configuration screen

Pressure Sensor

This screen is available only if the ABS ECU is an Advanced EC-60™. The pressure sensor screen allows the user to monitor pressure sensors. Along with this functionality, the user has the ability to perform data acquisition of the pressures and save the results to a comma delimited file. The pressures may be monitored both graphically and numerically.

The pressure sensor window features are similar to the wheel speed window. You can select which pressure or pressures to display by having the check mark next to pressure name. You can select graph type. The information provides the amount of time data acquisition has been active. The buttons and their functionality are also the same as on the wheel speed screen.

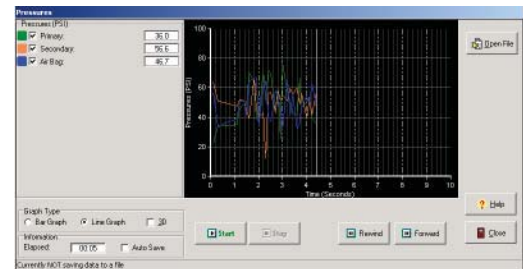


Figure 80

Stability Sensor

This screen is available only if the ABS ECU is an Advanced EC-60™. The stability sensor screen allows the user to monitor stability sensors. Along with this functionality, the user has the ability to perform data acquisition of the stability sensors and save the results to a comma delimited file. The pressures may be monitored both graphically and numerically.

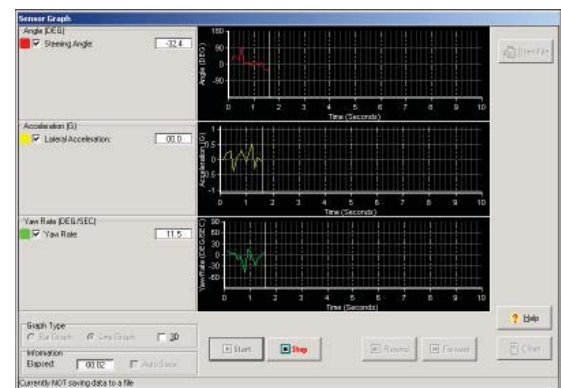


Figure 81

The stability sensor window has features and operates similar to the wheel speed window. You can select which sensors to display what type of graph, save data, and etc. The control buttons operate the same as on the wheel speed window.

Data Acquisition Control Buttons

Start	Begins data logging
Stop	Ends data logging session
Rewind	Allows user to move backwards in time through the data
Forward	Allows user to move forward in time through the data

Control Buttons

Open	Opens saved data
Close	Closes screen
Help	Launches Help System

Scratch Pad

Not all ABS ECUs supported by ACom™ diagnostics have the scratch pad. Typically the trailer ABS ECUs have a scratch pad. Scratch pad enables the reading and writing to a specified area of memory in the ABS ECU. This allows information to be stored for OEM manufacturing data and fleet service management.

The screenshot shows the 'Scratch Pad window' with tabs for 'OEM' and 'Fleet'. The 'OEM' tab is active, displaying several text input fields for OEM data: OEM Name (ABCDE), Plant Location (FGHIJKLMNOAB), Date of OEM Test (CDEFGHIJ), Time of OEM Test ((Not used)), VIN (KLMNOABCDEFG), Manufacturing Date ((Not used)), QC Test Passed/Verified ((Not used)), and Technician Information (HIJKLMNOABCDEFG). Below these is a larger text area for 'OEM Free Text' containing 'HIJKLMNOABCDEFGHIJKLMNOAB'. On the right side of the window are four buttons: Read, Write, Help, and Close.

Figure 82

Fleet scratch pad is shown next.

The screenshot shows the 'Scratch Pad window' with the 'Fleet' tab active. It displays text input fields for: VIN (CDEFGHIJ), Date of Maintenance (KLMNOABC), Time of Maintenance ((Not used)), and Technician Information (DEFGHIJK). Below these is a larger text area for 'Fleet Free Text' containing 'LMNOABCDEFGHIJKLMNOABCDEFGHIJKLMNOABCDEFGH' and 'JKLMNOPQABCDEFGHIJKLMNOABCDEFGHIJKLMNOABCDE'. On the right side of the window are four buttons: Read, Write, Help, and Close.

Figure 83

Control Buttons

Read	Reads information from the scratch pad
Write	Writes information to the scratch pad
Help	Launches Help system
Close	Closes screen

ADL Auxiliary Design Language

This screen provides the mechanism to add an ADL program, which allows an AUX input or output of the ABS ECU to be programmed for a specific function. Currently the TABS-6 and EC-60™ are the only ABS ECU models to support ADL.

The screenshot shows the 'ADL Auxiliary Design Language' window. It has a 'Program Information' section with fields for Program Number (27), Secondary No. (27), Target ECU (ABS/AB), and Instruction Set (3). To the right is an 'Auxiliary I/O Used' table with columns for I/O, Type, and Description. The table shows 'IO4' as 'Output' for 'Traction Enable/Disable'. Below this is an 'ABS Flex Program Description' text area containing instructions for controlling the traction active lamp. On the right side of the window are several buttons: Read ECU, Load, Program, Erase, Drawing, Help, and Close.

Figure 84

Program information section provides the user with read only information regarding the program number of the ADL function, the ECU type the ADL program is intended for, and instruction set information.

Auxiliary I/O displays which I/O the ADL function will use what type, either input or output, and the description of the ADL feature.

The ABS flex program description explains the operation of the ADL feature.

For more details on ADL please call 1-800-AIR-BRAKE (1-800-247-2725).

Control Buttons

Read ECU	Reads ECU current ADL program information
Load	Select ADL program to load (*.adl)
Program	Download of ADL program
Erase	Erases ADL program
Drawing	Displays system drawing of ADL program (*.pdf)
Help	Launches Help system
Close	Closes screen

Tire Inflation and Monitoring System

The TIMS window is used to display various data such as general information, system operation, inflation history configuration, and system test of the TIMS.

General Information

General Information displays the make, serial number, date code, software version, model, and reset counter.

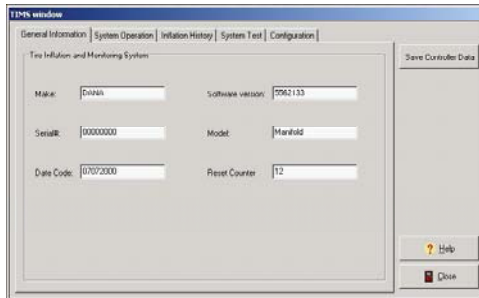


Figure 85

System Status

System operation screen displays various status information regarding the tire inflation system. The system status area displays the pressures manifold, atmospheric, and last supply readings.

Channel Status

The channel status is continually monitoring and displaying the state of the tires. Under last check the pressure displayed is the pressure of the tires when checked. The mode/status is continually cycling through various states such as pressure check, vent check, and maintain. The target is the pressure the tires are intended to be inflated to.

Solenoid Electrical Status

The solenoid electrical status will change as the mode/status changes correlating to what the tire inflation system is doing.

Diagnostic Trouble Codes (DTCs)

DTCs are the diagnostic trouble codes of the system, the number of both active and historical codes are displayed.

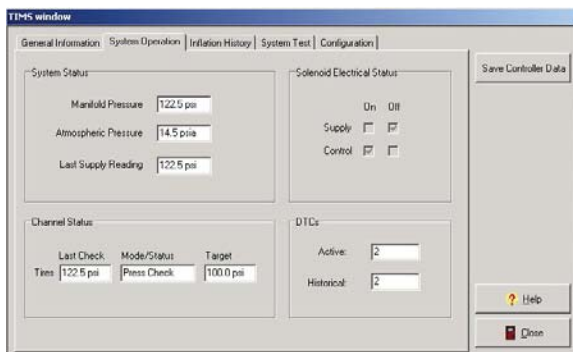


Figure 86

Inflation History

Inflation history provides the information on how long the system has been powered on, time spent re-inflating to target pressure, and how much the pressure was below the target pressure at the start of the inflate.

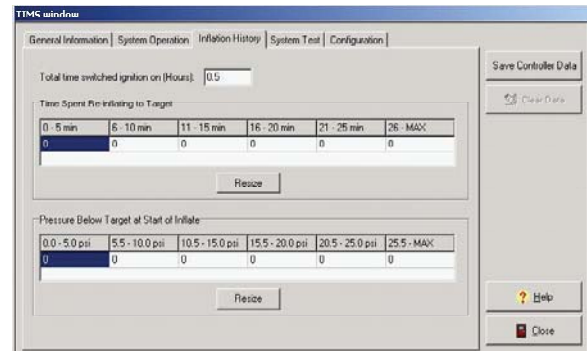


Figure 87

Resize

Resize allows the user to adjust the time and pressure values. Once the values are inputted, select update ECU for the changes to take effect.

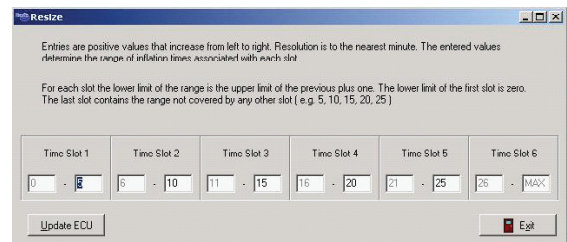


Figure 88

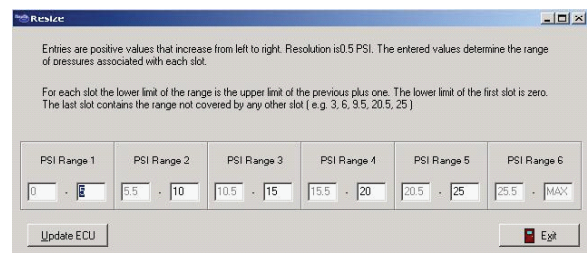


Figure 89

System Test

System test allows the user to monitor and verify system operation.

System Status

System status is the current readings for both the manifold and atmospheric pressures.

Indicator Lamp

Indicator lamp allows the user to verify the operation indicator lamp by selecting on to illuminate the lamp and off to extinguish the lamp.

Diagnostic Test

Diagnostic tests allows the user to place the system in one of the various conditions while the solenoid electrical status will display the status of the control and supply for the particular condition the system is in.

Diagnostic Trouble Codes (DTCs)

DTC's are the diagnostic trouble codes of the system, displaying the number of active and historical DTC's the system has seen. Go to the DTC screen to obtain the actual DTC information for the code.

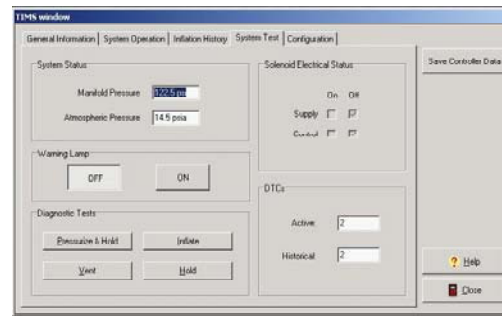


Figure 90

Configuration

Configuration screen provides the user to set up TIMS system target pressure, what percentage below target pressure before the TIMS indicator, and J1587 MID depending on which trailer, if more than one trailer is connected, to configure.

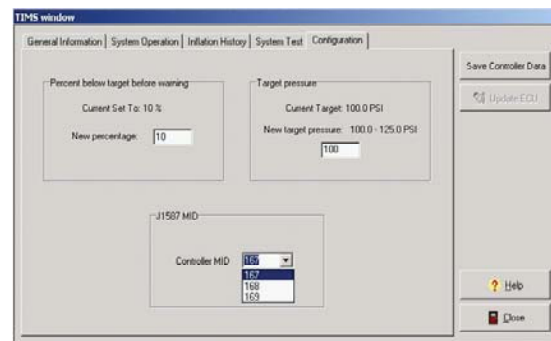


Figure 91

Known Issues with ACom™ Operation

- Hot keys do not work with program.
- Older models of the EC-30T may not support scratch pad. If user is in the installation test at the scratch pad step the program may freeze. NOTE: Stand alone scratch pad works fine.
- TABS-6 event history may take two clear commands to actually clear the history.
- Extreme graphics causes the right side and bottom of some screens to be cut off. Please change graphics back to small or 96dpi.
- EC-17/30 with an event history wrap around will display Data read in progress forever.
- ACom will not run on Windows 95.
- Registry is not completely removed during uninstall.

