



Important advice:

1. Please read the operating instructions thoroughly before using your ISRI -seat and acquaint yourself with its technical features.
2. Keep the operating instructions within the vehicle.
3. The ISRI -seat has to be installed or repaired by specialists under consideration of the specific country's regulations.
4. We point out that this seat is a safety component. Any modifications to the seat and disregard of the instruction manual leads to the loss of warranty.

Attention:

Due to reasons of road safety, the driver seat must only be adjusted when the vehicle is stationary.

Please note:

Seat anchorages and locking parts have to be checked from time to time. Modifications to the safety belt system are not allowed.

- 1 Horizontal slide adjustment**
Pull lever and move seat forward/backward
Release the lever to lock the seat
- 2 Slope adjustment**
Pull handle and adjust the slope by loading /unloading the front seat cushion area
- 3 Seat cushion adjustment**
Pull lever and move the seat cushion forward/backward.
Release the lever and lock seat cushion
- 4 Quick air release**
Flip switch down, seat lowers.
Flip switch up, seat returns back to the adjusted height
- 5 Damper adjustment**
By adjusting the damper, the suspension characteristics of the seat can be optimally adapted to every driver and condition
Lever up: min damper force, Lever down: max damper force
- 6 Height adjustment**
Pull or push handle and adjust the seat to desired height
- 7 Lumbar support**
Push button to vent and bleed the air chamber, to best fit the contour of your body's shape
- 8 Backrest adjustment**
Pull handle and adjust angle by applying your weight to the backrest
- 9 Armrest**
The inclination can be adjusted by rotating the knob in front

DIHP, INC
361 Boul. Fontainebleau
Blainville QC J7B 1Y8
Tel: 514-669-2740

ISRINGHAUSEN, Inc.
1458 S 35th St.
Galesburg, MI 49053
Phone: 269.484.5333
www.isriusa.com