

Coolant level sensor

The coolant level sensor is placed in the expansion tank and registers the coolant level. Refer to the OEM service manual for more information.

Effect of output signal on the system:

- Checking of the coolant level and activating a warning lamp on the instrument panel

M027570 - 02.22.2010

This information applies exclusively to the entered chassis number or the selected engine type. Please take into account that this information may change daily. Therefore the provided information is only valid on 12-13-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. (/)