


Fuel filter

The fuel filter filters dirt out of the fuel.

The fuel enters via connection (1) and is forced through the filter element (2). There is a central tube (3) in the filter element. The filtered fuel flows to the fuel filter holder.

There is an orifice in the screw on the fuel filter holder to bleed the air out of the system (filter).

Open the screw to bleed air out of the system.

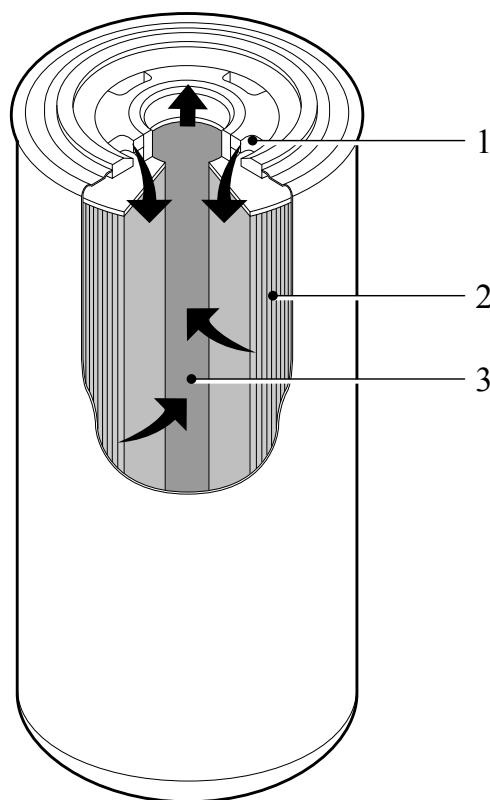

i401190



M026808 - 02.19.2010

This information applies exclusively to the entered chassis number or the selected engine type. Please take into account that this information may change daily. Therefore the provided information is only valid on 12-13-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. (/)