


Temperature after BPV sensor (F853)

The function of the temperature sensor after BPV (F853) is to measure the exhaust gas temperature after the Back-Pressure Valve (BPV). A temperature sensor configured as an RTD (Resistance Temperature Detectors) is used for measuring the exhaust gas temperature. The resistance increases as the temperature increases.

Effect of output signal on the system:

- Calculation of the NO2 mass flow

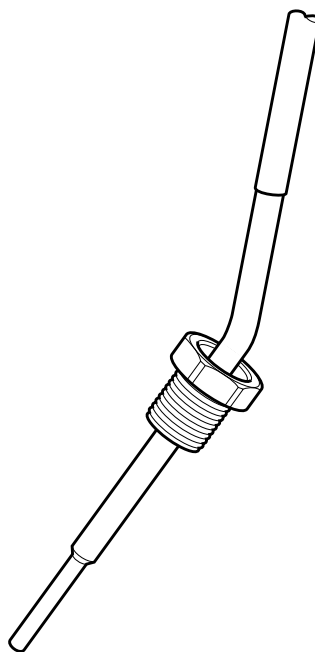

i401715



M028064 - 02.22.2010

This information applies exclusively to the entered chassis number or the selected engine type. Please take into account that this information may change daily. Therefore the provided information is only valid on 12-13-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. (/)