

P1722

Fault code description

BPV actuator - Unable to reach target position

Possible cause

1. Faulty wiring
2. Faulty connector
3. Faulty actuator

Additional information

-

Set condition of fault code

-

Reset condition of fault code

-

M028659 - 07/22/2015 18:09:37

This information applies exclusively to the entered chassis number or the selected engine type. Please take into account that this information may change daily. Therefore the provided information is only valid on 12-15-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. (/)

P1722, Diagnostic information

Technical data

["BPV actuator \(L020\)"](#)

Location of component(s)

["Location information, PMCI-2"](#)

Electrical diagram(s)

["PMCI-2"](#)

Description of component(s)

["BPV actuator \(L020\)"](#)

Block diagram

["PMCI-2"](#)

M046597 - 07/23/2015 02:19:58

This information applies exclusively to the entered chassis number or the selected engine type. Please take into account that this information may change daily. Therefore the provided information is only valid on 12-15-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. (/)