

P3986

Fault code description

NOx sensor before catalyst power supply - Interrupted

Possible cause

1. Short circuit to earth in the wiring harness.
2. Open circuit in power supply wiring harness.
3. Supply voltage too high.
4. Internal malfunction of the NOx before catalyst sensor.

Additional information

-

Set condition of fault code

This diagnostic runs continuously when the key switch is in the ON position and the engine is running.

The EAS-3 ECU has detected that the NOx before catalyst sensor supply voltage is outside the specified range.

Reset condition of fault code

This fault code will change to inactive immediately after the diagnostic runs and passes.

M029237 - 07/22/2015 16:14:57

This information applies exclusively to the entered chassis number or the selected engine type. Please take into account that this information may change daily. Therefore the provided information is only valid on 12-19-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. (/)

P3986, Diagnostic information

Technical data

["Sensor, NOx before catalyst \(F844\)"](#)

Location of component(s)

["Location information, EAS-3"](#)

Electrical diagram(s)

Refer to the OEM service manual for more information.

Description of component(s)

["Sensor, NOx before catalyst \(F844\)"](#)

Block diagram

["Block diagram EAS-3"](#)

Step by step troubleshooting



Please perform the troubleshooting steps below by utilising the breakout harness if necessary to check electrical components such as sensors, electrical control units or harnesses. Back probing is not recommended as it could damage the harness. The ignition should always be in the OFF position when connecting or disconnecting electrical components to reduce the likelihood of damage to electrical components.



- Disconnecting the EAS connectors during the troubleshooting process will result in multiple errors.
- For specific electrical component information and pin out locations, always refer to the technical data.
- It is necessary to exit the fault code menu in DAVIE and run the diagnostic test again to identify a

change in errors.

- Remember that the truck's operational or mechanical issues may be the root cause of both active and inactive fault codes. Refer to the 'possible causes' section.

Step by step 1: Check fault codes

Step 1A: Check for fault codes

Troubleshooting steps

1. Turn the key switch ON.
2. Use DAVIE to check fault codes.

Is fault code P3986 active?

- Yes – Proceed to step 2A
- No – Proceed to step 4A

Step by step 2: Check the NOx sensor before catalyst and the circuit

Step 2A: Inspect the NOx before catalyst sensor and connector pins

Troubleshooting steps

1. Turn the key switch OFF.
2. Disconnect the NOx before catalyst sensor from the harness.
3. Inspect the NOx before catalyst sensor harness and connector for:
 1. corroded or dirty pins
 2. damaged pins
 3. pushed back or expanded pins
 4. loose connector
 5. moisture in or on the connector
 6. connector shell damaged
 7. missing or damaged connector seals
 8. wire insulation damage

Dirty or damaged pins/connector?

- **Yes** – A dirty or damaged connection has been detected. Clean, repair or replace the damaged connection or harness if possible
- Proceed to step 4A
- **No** – Proceed to step 2B

Step 2B: Check the voltage to the NOx before catalyst sensor

Troubleshooting steps

1. Turn the key switch OFF.
2. Disconnect the NOx before catalyst sensor from the harness.
3. Turn the key switch ON.
4. Check the power supply and return circuit to the NOx before catalyst sensor.
5. Measure the voltage between the NOx before catalyst sensor supply circuit and return circuit at the NOx sensor harness connector.



Check the voltage at key ON, while cranking the engine and with the engine running at idle.

Is the voltage within 1 VDC of the battery voltage?

- **Yes** – Proceed to step 2C
- **No** – Proceed to step 3A

Step 2C: Check the condition of the NOx before catalyst sensor

Troubleshooting steps

1. Turn the key switch OFF.
2. Connect the NOx before catalyst sensor to the harness.
3. Turn the key switch ON.
4. Start and idle the engine.
5. Operate the engine until the NOx before catalyst sensor is above 302°F (150°C).
6. Check the appropriate circuit response.

Is fault code P3986 active?

- **Yes** – Replace the NOx before catalyst sensor - Proceed to step 4A
- **No** – The removal and re-installation of the connector corrected the fault. Proceed to step 4A

Step by step 3: Check the battery and the harness

Step 3A: Check the battery connections

Troubleshooting steps

1. Turn the key switch OFF.
2. Check the positive and negative battery terminals.

Are the connections tight and corrosion-free?

- **Yes** – Proceed to step 3B
- **No** – Tighten and/or clean the connections. Refer to the OEM manual. Proceed to step 4A

Step 3B: Check for an open circuit in the battery voltage supply

Troubleshooting steps

1. Turn the key switch OFF.
2. Disconnect the NOx before catalyst sensor from the harness.
3. Turn the key switch ON.
4. Check for an open circuit.
5. Measure the voltage between the NOx before catalyst sensor battery supply pin and the engine block earth.

Is the voltage within 1 VDC of the battery voltage?

- **Yes** – An open circuit has been detected in the NOx before catalyst sensor earth circuit. Repair or replace the wiring. Proceed to step 4A
- **No** – An open circuit has been detected in

the NOx before catalyst sensor supply circuit. Check for an open circuit, short circuit or blown fuses in the power supply circuit. Repair or replace the wiring/fuse. Proceed to step 4A

Step by step 4: Clear the fault code

Step A: Disable the fault code

Troubleshooting steps

1. Connect all components.
2. Operate the system within the 'reset condition of the fault code' found in the fault code information.
3. Use DAVIE to verify if the fault codes are inactive.

Is fault code P3986 inactive?

- **Yes** – Proceed to step 4B
- **No** – Return to the troubleshooting steps - Proceed to step 1A

If all the steps have been completed and checked again, contact the Engine Support Center for further instructions.

Step 4B: Clear the inactive fault codes

Troubleshooting steps

1. Connect all components
2. Turn the key switch ON.
3. Use DAVIE to clear the inactive fault codes.

Have all the fault codes been cleared?

- **Yes** – Repair complete
- **No** – Troubleshoot any remaining active fault codes

M046933 - 07/22/2015 16:13:22

This information applies exclusively to the entered chassis number or the selected engine type. Please take into account that this information may change daily. Therefore the provided information is only valid on 12-19-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. (/)