


Relay, line, heating (R026)

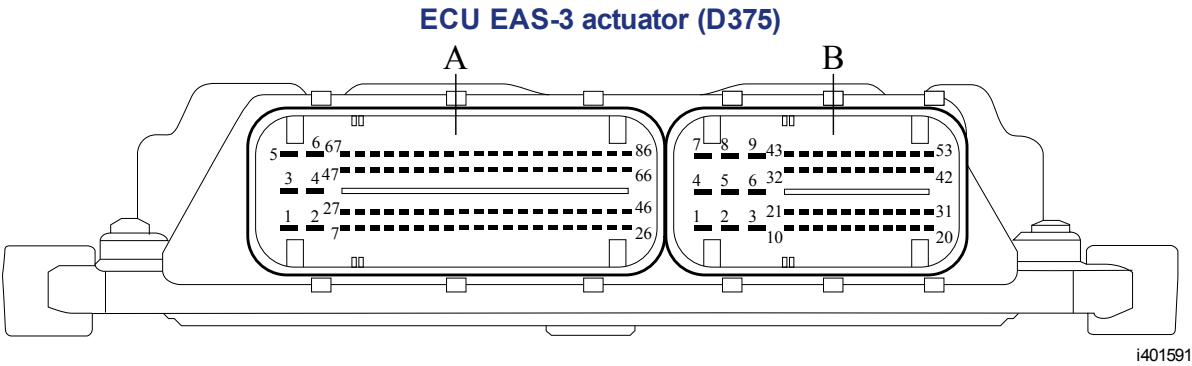

i401591



|     |   |      |     |                           |   |
|-----|---|------|-----|---------------------------|---|
| A   | Electronic unit connection point  |      |     |                           |   |
| B   | Description of connection point   |      |     |                           |   |
| C   | Reading at connection point (Ubat = battery voltage)                            |      |     |                           |   |
| D   | Measuring unit  |      |     |                           |   |
| E   | Explanatory notes (if applicable)   |      |     |                           |   |
| F   | The 'X' indicates that additional information is available in 'Technical Data.' |      |     |                           |   |
| A   | B   | C    | D   | E                         | F |
| B30 | High side, relay, line, heating   | Ubat | VDC | When the key switch is on |   |
| B41 | Low side, relay, line, heating  | 0    | VDC | When the key switch is on |   |



Refer to the OEM service manual for more information.

M026997 - 02.23.2010

This information applies exclusively to the entered chassis number or the selected engine type. Please take into account that this information may change daily. Therefore the provided information is only valid on 12-19-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. ( / )