
12/13/2015 Print

## Sensor, coolant level low

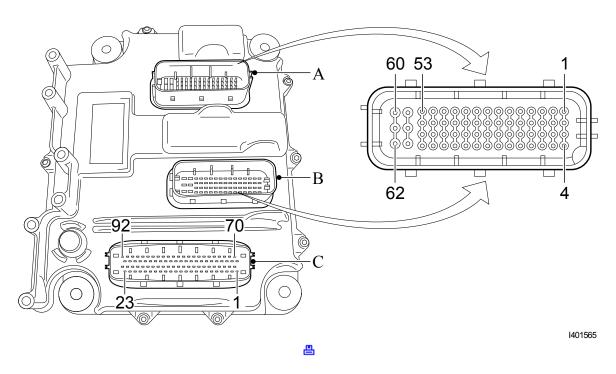

| Α   | Electronic unit connection point  |   |     |                                       |   |  |
|-----|---|---|-----|---------------------------------------|---|--|
| В   | Description of connection point   |   |     |                                       |   |  |
| С   | Reading at connection point (Vbat = battery voltage)                        |   |     |                                       |   |  |
| D   | Measuring unit  |   |     |                                       |   |  |
| E   | Explanatory notes (if applicable)   |   |     |                                       |   |  |
| F   | 'X' indicates that additional information is available in 'Technical data.' |   |     |                                       |   |  |
| A   | В   | С | D   | E                                     | F |  |
| C07 | Coolant level low sensor input signal                                       |   |     |                                       | х |  |
| C29 | Ground, coolant level low sensor  | 0 | VDC |                                       |   |  |
| C53 | Sensor power supply   | 5 | VDC | Open voltage, with detached connector |   |  |

| Г | • | ٦ |
|---|---|---|
| ı |   | 1 |
| ı |   | ı |

Refer to the OEM service manual for more information.

12/13/2015 Print

information may change daily. Therefore the provided information is only valid on 12-13-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. ( / )