


Valve, Air Shutoff (L071)

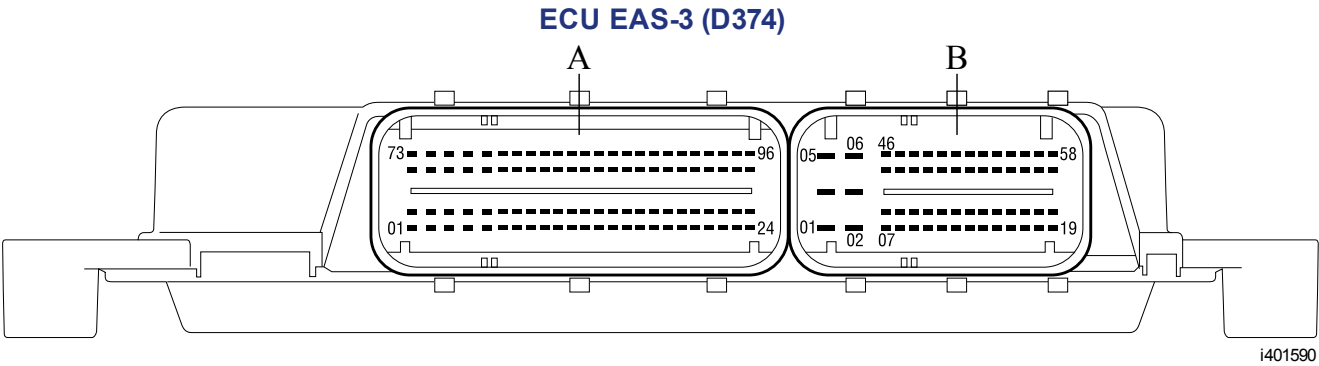

i401590



A	Electronic unit connection point				
B	Description of connection point				
C	Reading at connection point (Ubat = battery voltage)				
D	Measuring unit				
E	Explanatory notes (if applicable)				
F	The 'X' indicates that additional information is available in 'Technical Data.'				
A	B	C	D	E	F
A32	Signal, valve air shutoff		%	The current is regulated through a duty cycle. To open the valve, the duty cycle is approximately 100% for two seconds. To keep the valve open, the holding current is regulated through a lower duty cycle (approximately 50%).	
A79	Ground, valve air shutoff	<0.5	VDC		

This information applies exclusively to the entered chassis number or the selected engine type. Please take into account that this information may change daily. Therefore the provided information is only valid on 12-19-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. (/)