


Valve, dosing (L075)

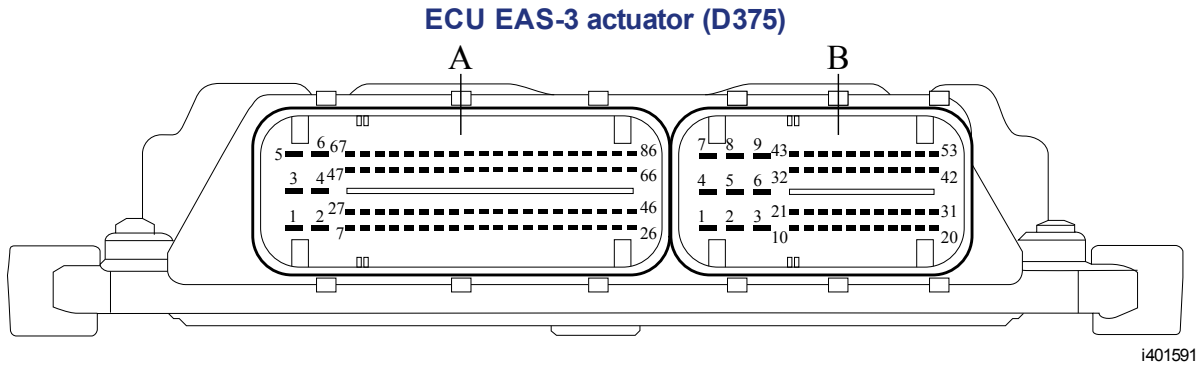

A	Electronic unit connection point				
B	Description of connection point				
C	Reading at connection point (Ubat = battery voltage)				
D	Measuring unit				
E	Explanatory notes (if applicable)				
F	The 'X' mark indicates that additional information is available in 'Technical data.'				
A	B	C	D	E	F
A12	Ground, valve dosing	<0.5	VDC		
A32	Signal, valve dosing		%	When dosing valve is activated. Duty cycle depends on the quantity of DEF to be injected.	

Dosing valve resistance 11–18 Ω

M026991 - 09.26.2012

This information applies exclusively to the entered chassis number or the selected engine type. Please take into account that this information may change daily. Therefore the provided information is only valid on 12-19-2015. You cannot derive any rights from the information provided with respect to vehicles and/or components of another series, with another chassis number, and/or of another date. ( / )