





© 2006, 2007 Blue Bird Corporation. All rights reserved.

The Blue Bird All American complies with all applicable federal and state regulations. These include, but are not limited to, Federal ADA as well as state accessibility, safety and security requirements.

The Blue Bird All American meets all applicable Federal Motor Vehicle Safety Standards (FMVSS) rules and regulations.


In the event of any conflict between the requirements of this publication and any applicable legal requirement, the legal requirement prevails. Technical requirements that exceed the legal requirements are not considered to conflict.

Many of the components of Blue Bird buses are obtained from outside suppliers. Where maintenance and/or service information conflicts with the component manufacturers documentation, the manufactures's documentation prevails.

Blue Bird Corporation continually endeavors to improve its product and reserves the right to change without notice. The material presented in this manual is accurate at the time of publication.



CONTENTS

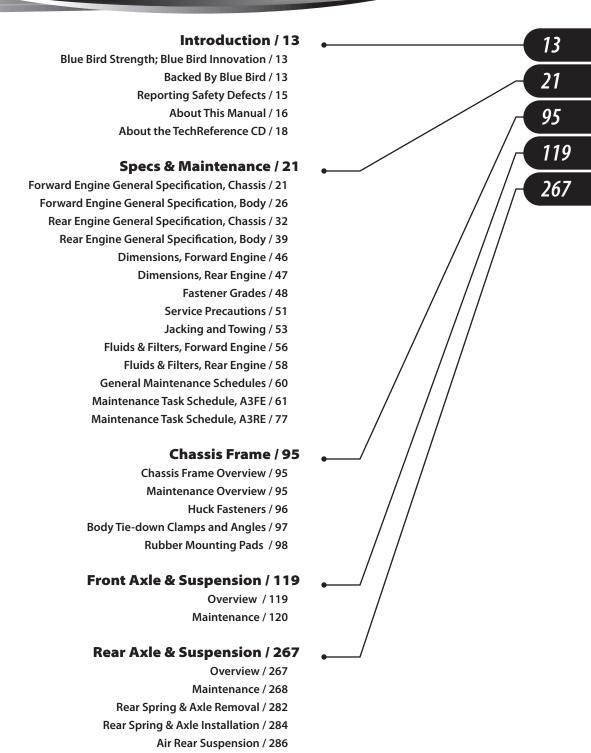





Power / Drivetrain / 337

Overview / 337

Transmission / 343

Transmission Maintenance / 345

Shift Cable Adjustment / 347

Drive Line / 349

Air Brakes / 351

Overview / 351

Brake Interlock / 363

Maintenance Overview / 364

Air Compressor / 365

Air Compressor Governor (D-2) / 366

Air Dryer (Optional) / 368

Air Tanks / 371

Treadle Valve (E-8P) / 373

Relay Valve (R-12) / 375

Quick Release Valve (QR-1H) / 377

Park Brake Control Valve (PP-1) / 379

ABS Modulator Valves (M-32QR) / 380

ABS Wheel Speed Sensors (WS-24) / 382

ABS Controller (EC-60) / 384

Brake Chambers, Front / 385

Brake Chambers, Rear / 387

Slack Adjusters / 391

Brake Shoes & Drums / 396

Front brake assembly / 398

Rear Brake Assembly / 400



351

Hydraulic Brakes / 531

Overview / 531

Maintenance Overview / 532

Brake Light Switch Mounting & Adjustment / 536

Master Cylinder / 536

Booster / 538

ABS Modulator / 541

Wheel Speed Sensors / 543

ABS Electronic Control Unit (ECU) / 545

Calipers / 548

Brake Pads / 549

Brake Rotors / 550

Brake Rotor Removal / 550

Front Brake Reassembly / 551

Rear Brake Removal, / 553

Rear Brake Rotor Reassembly / 555

Parking Brake / 557

Brake Interlock, Hydraulic / 562

Cooling System / 651

Overview / 651

About Coolant / 668

Standard Equipment Coolant / 668

Optional Extended Life Coolant / 668

Coolant Filter / 669

Coolant Decals / 669

Coolant Maintenance / 669

Coolant Filter (Optional) / 672

Radiator Shutters / 675

Radiator / 679

Cooling System Drain, Flush & Refill / 684

Fan Clutch, All American Forward Engine / 688

Hydraulic Fan Drive, All American Rear Engine / 690

Intake & Exhaust / 695

Intake Overview / 695

Intake System Maintenance / 697

Exhaust System / 705

Regeneration Process In Caterpillar Engines / 706


Regeneration Process In Cummins Engines / 708

DPF Regeneration In Blue Bird Buses / 710

Levels of Notification / 711

Stationary Regeneration Precautions / 714

Exhaust Piping / 716

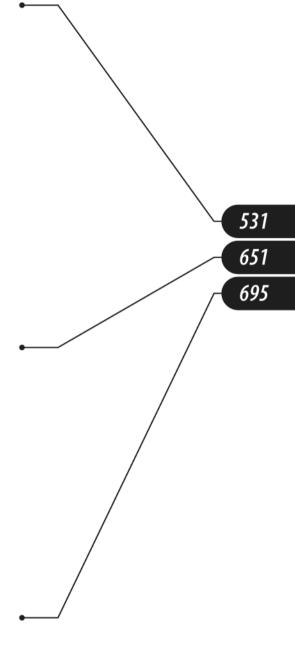





Fuel System / 727

Fuel System / 727

Accelerator Control, Electronic / 734

Throttle Position Sensor / 734

Auto Calibration / 736

Testing And Troubleshooting (CAT C7) / 736

Testing And Troubleshooting (Cummins) / 738

Instrumentation / 739

Overview / 739

Instrument Panel Removal / 740

Testing a Gauge By Substitution / 741

Body Electrical / 811

Doran Warning Light Monitor / 811

Doran Troubleshooting / 811

Body Wiring Schematics / 813

Chassis Electrical / 819

Charging System / 819

Alternator Removal / 823

Automatic Belt Tensioner / 825

Starter / 826

Starter Motor Removal / 832

J-1939 Harness Diagnostics / 833

Chassis Wiring Schematics / 834

Steering / 915

Overview / 915


Steering System Maintenance / 916

Steering Wheel & Switches / 917

Steering Gear / 919

Steering Pump, Front Engine All American / 920

Steering Pump, Rear Engine All American / 921

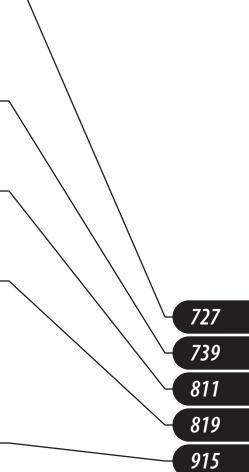





Body Structure / 983

Body Glass / 983

Windshield Glass Replacement / 983

Split Sash Window and Glass Replacement / 984

Rear Vision Glass Replacement / 985

Transit Sliding Window Removal / 986

Transit Window Glass Replacement / 986

Outward Opening Entrance Door / 988

Manual Door Control / 990

Pneumatic Door Opener / 991

Electric Door Opener / 992

Door Panels / 993

Stop Arms / 996

Seating, Restraints, Handrails / 997

Overview / 997

Driver's Seat / 997

Manually Operated Driver's Seat / 998

Seat Care and Cleaning Tips / 999

Passenger DOT Seats / 999

Track Mounted Passenger Seats / 1000

Seat Belts & Shoulder Harnesses / 1001

Body Finish / 1005

Exterior Paint / 1005

Interior Paint / 1005

Front End / 1005

Rear End / 1006

Headlining / 1006

Fastening / 1006

Floor Covering / 1006

Undercoating / 1007

Lettering/Decals / 1007

Index / 1009

