


NOTES:

- 1) USE WITH T600 OR T800 (NOT T8CC, T8WC OR T8LW.)
- 2) USE WITH ANY OF THE FOLLOWING HEATED AIR DRYERS MTD ON RH FRONT DRIVE BRACKET:
BENDIX AD-9, AD-IP OR AD-SP
WABCO SS1000, SS1200 OR TURBO 2000.
- 3) USE WITH PD BOX UPGRADE.
- 4) USE WITHOUT RH STEER CHASSIS.
- 5) USE WITHOUT DUAL STEERING GEARS.
- 6) ROUTE WITH HEADLAMP HARNESS WHERE APPLICABLE.
- 7) ROUTING, SECURING, AND CONTAINMENT SHALL BE PURSUANT TO R026-198-77 AND R026-198-98-15 EXCEPT AS NOTED HEREIN.
- 8) SUPERSEDES R414-213.

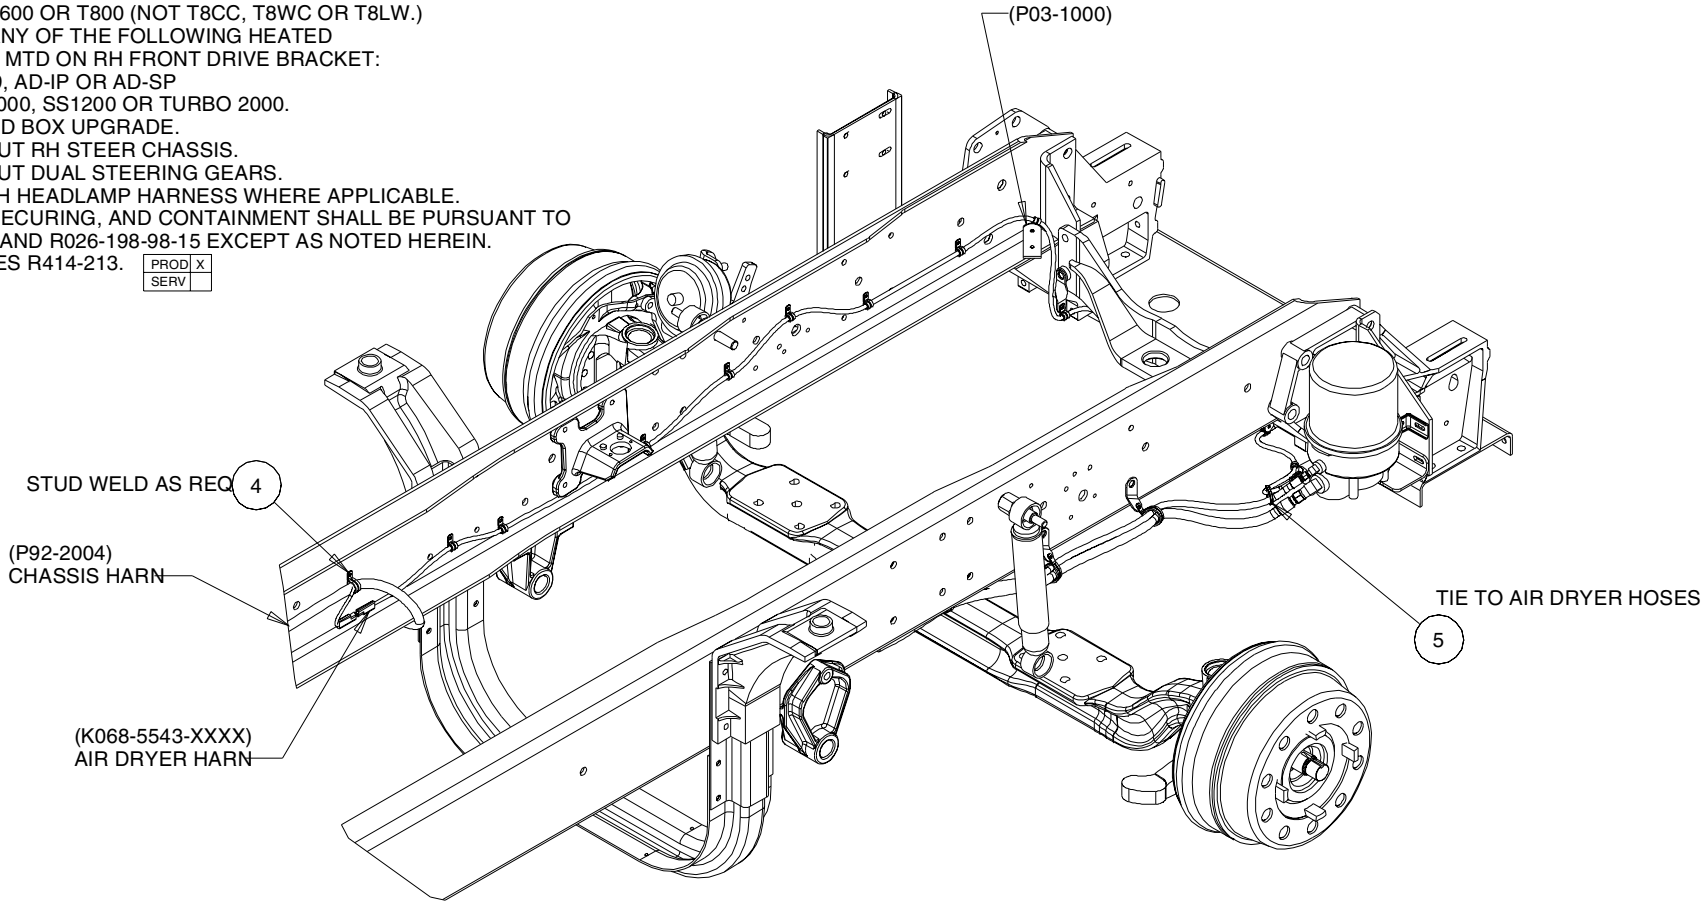

ITEM	QTY	PART NUMBER	DESCRIPTION
5	REF	K231-363-XX	STRAP-CABLE TIE
4	REF	K077-123-XX	CLAMP-CUSHIONED
3	1	K275-2422	BRACKET-LINES MISC
2	1	K299-776	CLIP-LINES, MISC
1	1	K221-4103-11	SPACER

