



← FORWARD

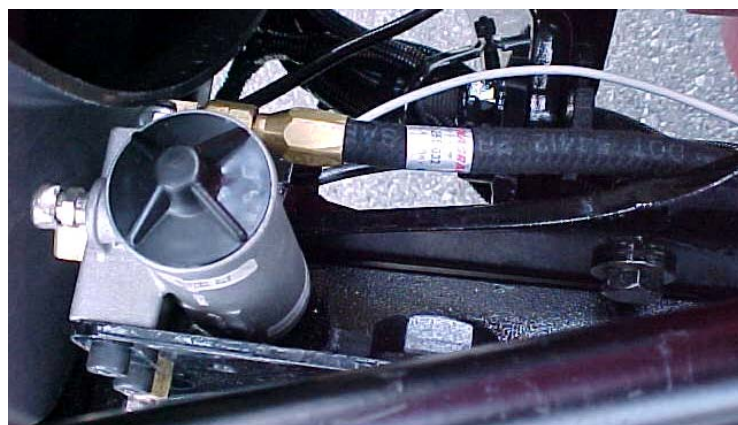

ROUTE GOVERNOR HOSE FROM COMPRESSOR ALONG IN SIDE OF FRAME RAIL TO REMOTE MOUNTED GOVERNOR.

ROUTE LINES INSIDE LH RAIL, ATTACH LINES TO EXISTING BUNDLE PER R026-198-77.

COMPRESSOR

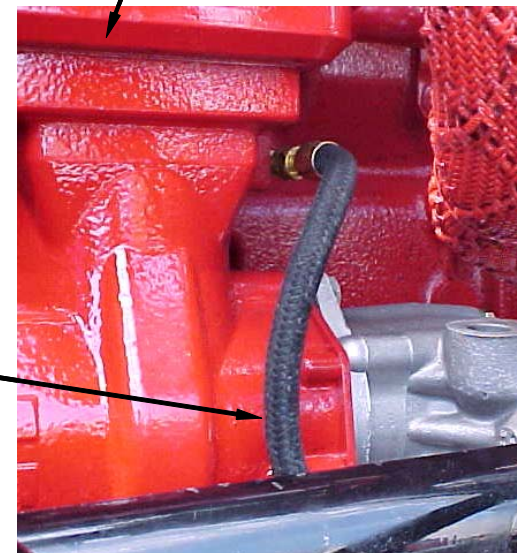

NOTES:

- 1) USE ON MODELS T600 & T800 WITH REMOTE MOUNTED GOVERNOR WITH 2002 ISX EGR ENGINE.
- 2) FOR INSTALLATION SEE G97-1073.
- 3) FOR PIPING SEE G94-1188.