




POWER STEERING  
RESERVOIR

JUMPSTARTS

VIEW SHOWING L.H. SIDE  
OF ENGINE

A

FORWARD

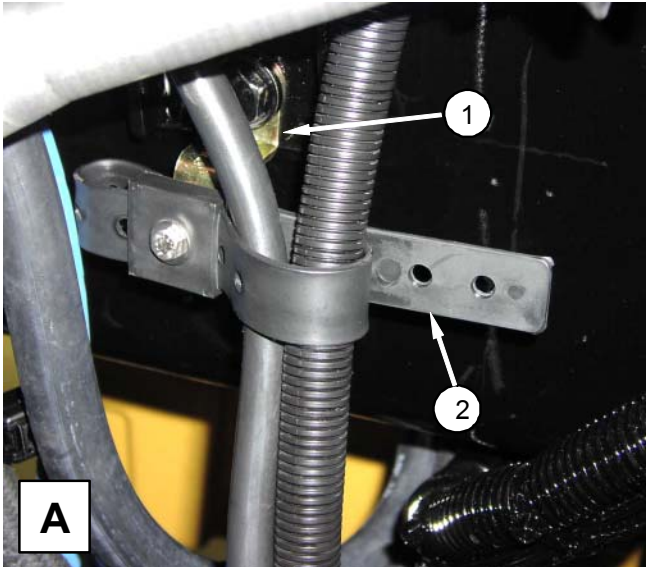

ATTACH STANDOFF TO EXISTING FRAME HOLE

NOTES:  
1) USE ON MODELS T600, T800 OR T8 W/FDA WITH REQUEST FOR  
JUMPSTART TERMINALS LOCATED UNDER HOOD ON  
POWER STEERING RESERVOIR.

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	P11-1015	BRACKET
2	1	W84-1000	STRAP