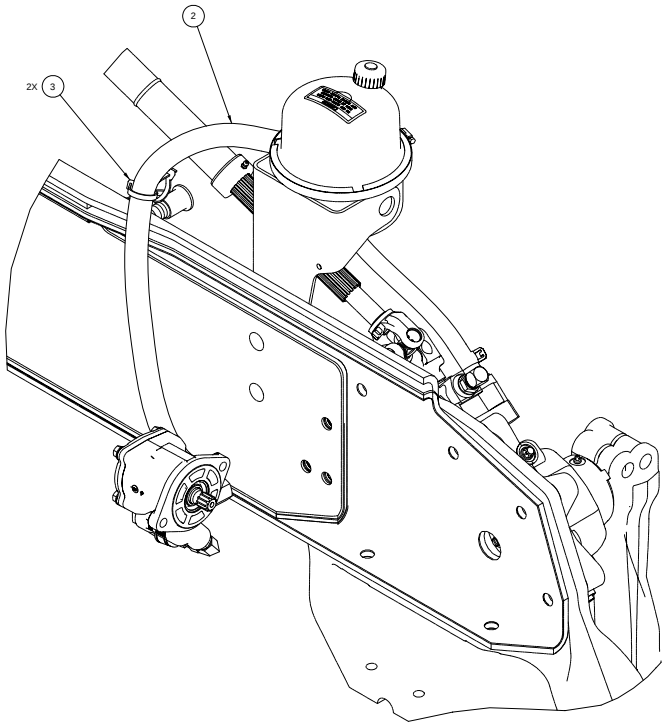
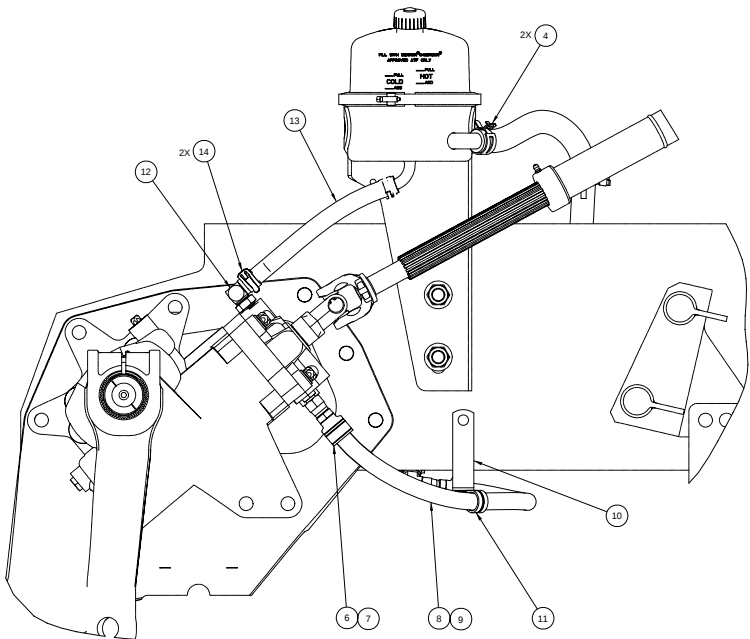


PS PUMP VIEWED FROM THE FRONT OF THE ENGINE

- GENERAL NOTES
- 1) USE ON MODEL T8B, T600,W9S,T2000.
 - 2) USE WITH 2007 CAT C13 ENGINE.
 - 3) USE WITH ALL SINGLE STEERING GEAR AND TRW EV SERIES PUMPS.
 - 4) REFER TO J94-1064 DIAGRAM FOR ID LOCATION.

PART NUMBER	USAGE						
	J95-1074-004	J95-1074-003	J95-1074-002	J95-1074-001	T800 C13		
1	2	2	2		14	933-200-10H	CLAMP-SPRING TENSION
1	1	1	1		13	J50-1022-080000	HOSE - RETURN
1	1	1	1	3A	12	26-02901	FITTING - RETURN HOSE 90°
1	1	1	1		11	D16-6003-5412114	CLAMP - CUSHION
1	1	1	1		10	K028-2489-16	BRACKET - PT HOSE 90°
1	-	-	-	2	9	J50-1008-08-024PT	HOSE - PRESSURE PT
-	1	1	1	2	8	J50-1008-08-022PT	HOSE - PRESSURE PT
-	1	-	-	2B	7	26-02360	FITTING - PT HOSE 45°
1	-	1	1	2B	6	26-03339	FITTING - PT HOSE STRAIGHT
1	1	1	1	2A	5	26-02085	FITTING - PT HOSE 90°
2	2	2	2		4	933-270-10H	CLAMP-SPRING TENSION
2	2	2	2		3	Y84-6000-002	STRAP-TIE
1	1	1	1	1	2	J50-1022-120000	HOSE - SUCTION
1	1	1	1	1B	1	26-02902	FITTING - SUCTION HOSE 90°